

Operating instructions

Güntner Motor Management GMM

for the management and speed control of EC fans using pressure, temperature or voltage



Series:

GMM EC/01
GMM EC/04
GMM EC/08
GMM EC/16

GMM EC/01.1
GMM EC/04.1
GMM EC/08.1
GMM EC/16.1

UL Version

GMM EC/01 UL
GMM EC/04 UL
GMM EC/08 UL
GMM EC/16 UL

GMM EC/01.1 UL
GMM EC/04.1 UL
GMM EC/08.1 UL
GMM EC/16.1 UL

Safety instructions

In order to prevent serious physical injuries or major material damage, work on/with the equipment may only be performed by authorised persons with the appropriate training and qualifications who are familiar with the setup, installation, commissioning and operation of speed controllers. These persons must read the operating instructions carefully before installation and commissioning. In addition to the operating instructions and national regulations on accident prevention, recognised technical rules (safety and professional work under UVV, VBG, VDE etc.) must be followed.

Repairs to the device may only be made by the manufacturer or a repair centre authorised by the manufacturer.

UNAUTHORISED AND IMPROPER INTERVENTIONS WILL INVALIDATE THE WARRANTY!

The speed controllers are located in the plastic housing (protection rating IP54). This protection rating is only guaranteed when the equipment is *closed*! The UL models are assembled on an open mounting plate.

An open controller creates exposure to hazardous electrical voltages; the protection rating of the open equipment is IP00! The applicable national accident prevention regulations must be followed when working on controllers under voltage.

Intended use

Ensure that fuses are only replaced with fuses of the specified rating and note that they must not be repaired or bridged. Only a double-pole circuit tester may be used to check that the equipment is disconnected from the power. The equipment is only intended for the purposes agreed in the order confirmation. Any other or additional use is not in accordance with its intended purpose. The manufacturer accepts no liability for any damage arising from unintended use. The intended use also includes compliance with the installation, operating and maintenance procedure described in these operating instructions. The technical data and the details of the terminal assignments can be found on the type plate and the instructions and must be followed.

Electronic equipment is not fundamentally failsafe! The user must therefore ensure that his system reverts to a safe condition in the event of failure of the equipment. The manufacturer accepts no responsibility for any damage to life and limb or to material goods and assets in the event of failure to comply with this provision and in the event of improper use.

The electrical installation must be performed in accordance with the relevant regulations (e.g. cable cross-section, fuses, earth conductor connection etc.). Additional information is included in the documentation. If the controller is used in a particular area of application, the requisite standards and regulations must be followed.

Commissioning notes

Prior to commissioning of the controller, check whether any residual moisture (condensation) has formed in the housing. If so, the equipment must be dried out. The same applies if the sachet of silica gel (desiccant) has discoloured as this indicates that the sachet of silica gel is no longer providing any protection against moisture. If there are large volumes of condensation (droplets on the interior walls and components), they must be removed manually. Once the equipment has been commissioned for the first time, the power supply and the internal control voltage must no longer be switched off for a long period. If this should nevertheless be necessary for operational reasons, suitable moisture protection must be provided.

Contents

	Page
Safety instructions	2
Intended use	2
Commissioning notes	2
1. General	7
1.1 Classification	7
1.2 Transport and storage, copyright notice	8
1.3 Warranty and liability	8
1.4 Manufacturer and supplier address	8
2. Quick guide to rapid commissioning	9
3. Installation of the GMM, cabling	11
3.1 EMC-compliant installation	11
3.2 Installation of the controller, ventilation	11
3.3 Cable laying, shielding	12
4. Connection	12
4.1 Controller mains connection	12
4.2 Controller fan connection	13
5. Potential-free signalling outputs	14
5.1 Digital output (11/12/14) (priority 1 alarms)	14
5.2 Digital output (21/22/24) (priority 2 alarms)	14
5.3 Digital output (31/32/34) (in operation)	14
5.4 Digital output (41/42/44) (threshold)	14
6. Control inputs	15
6.1 Enabling the GMM	16
6.2 Speed limiter (night setback)	17
6.3 Switching to 2nd setpoint	18
7. Analogue inputs	19
7.1 Connection of a pressure transmitter to B1/B2	20
7.2 Connection to external current sources at B1/B2	21
7.3 Connection of temperature sensor B3	22
7.4 Connect 0-10V standard signal to B4	23
8. Analogue outputs	24
9 Commissioning the GMM	25
9.1 Start-up menu	25
10. Display and operation	30
10.1 Info menu	30
10.2 Operating menu	31
10.2.1 Actual values	32

10.2.1.1 Input actual values	32
10.2.1.2 Control value	32
10.2.1.3 Air volume	32
10.2.1.4 Overall power	32
10.2.1.5 Fan speed	32
10.2.1.6 Fan power	32
10.2.1.7 Fan operating hours	32
10.2.2 Operating mode	33
10.2.2.1 Regulation	33
10.2.2.2 Enabled externally	33
10.2.2.3 Number and type of fans	33
10.2.2.4 Max. fan speed	33
10.2.2.5 Heat exchanger	33
10.2.2.6 Refrigerant	33
10.2.2.7 Hardware and software versions	33
10.2.3 Setpoints	34
10.2.3.1 Setpoint 1	34
10.2.3.2 Offset setpoint (in preparation)	34
10.2.3.3 Threshold	34
10.2.3.4 Night setback	35
10.2.3.5 Night setback - turn-on time	35
10.2.3.6 Night setback - turn-off time	35
10.2.3.7 Night setback - list of functions	35
10.2.4 Alerts	36
10.2.5 Language	37
10.2.6 Time	38
10.2.7 Manual mode	39
10.3. Service	40
10.3.1 Control parameters	41
10.3.2 Heat exchanger	42
10.3.3 Refrigerant	43
10.3.4 Operation mode	43
10.3.4 Operation mode	44
10.3.4.1 Auto internal	44
10.3.4.2 Auto external analogue	44
10.3.4.3 Auto external bus	44
10.3.4.4 Slave external analogue	44
10.3.4.5 Slave external bus	44
10.3.5 Bypass	45
10.3.6 Features	46
10.3.6.1 Number of setpoints	46
10.3.6.2 Night setback	47
10.3.6.3 Offset setpoint	47
10.3.6.4 Low Capacity Motor Management	48
10.3.6.4.1 LCMM Hysteresis	49
10.3.6.4.2 LCMM Fancycling	50
10.3.6.4.3 LCMM fan cycling assignment	50
10.3.6.4.4 LCMM min control value	51
10.3.6.4.5 LCMM control value adjustment	51
10.3.6.5 Subcooler function	52
10.3.7 I/O configuration	53
10.3.7.1 Inputs analogue	54
10.3.7.2 Current inputs	55
10.3.7.3 Temperature sensor input	55
10.3.7.4 Input 0..10V	55
10.3.7.5 Inputs digital	56
10.3.7.6 Outputs analogue	56

10.3.7.7 Outputs digital	56
10.3.8 Sel. unit IP/SI	57
10.3.9 Factory settings	57
10.3.10 Delivery setting	57
11. Errors and troubleshooting	58
11.1 General notes	58
12. Technical data	59
12.1 GMM EC/01 /04 /08 dimensions	59
12.2 GMM EC/16 dimensions	60
12.3 GMM EC/01 /04 /08 UL dimensions	61
12.4 GMM EC/16 UL dimensions	62
13. Electrical and mechanical properties	63
List of diagrams	64
Index	65
Repair order / Fault report	67
Notes	68
14. External control value scaling table	69
15. Table of error messages and warnings on the GMM display	70
16. Table of Fan IDs and VT numbers	71
17. Troubleshooting table	74

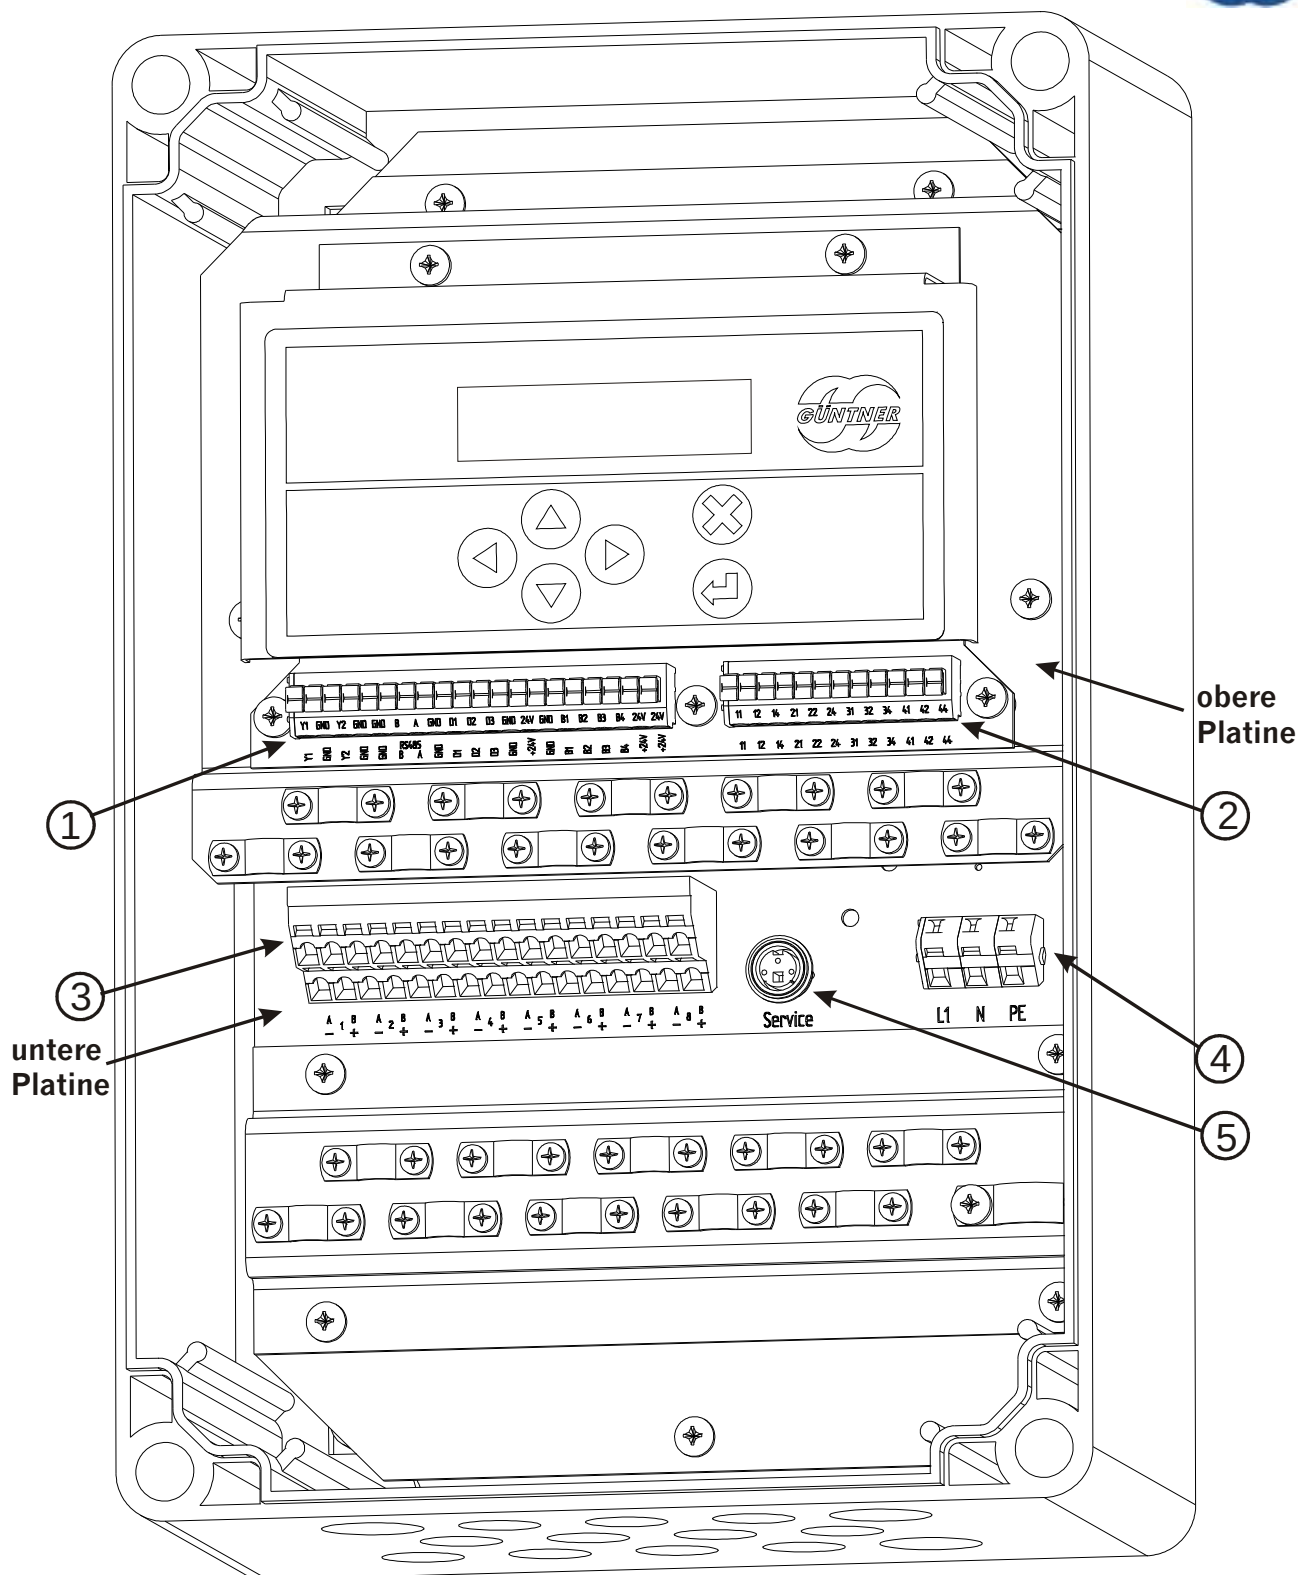


Fig. 1.1 Location of connections on the GMM EC/08

- (1) Analogue and digital inputs and outputs (see 6. Control inputs).
- (2) Potential-free signalling outputs (see 5. Potential-free signalling outputs)
- (3) EC fan connections 24 V DC, communication connection (see 4.2 Controller fan connection)
- (4) Mains connection (see 4.1 Controller mains connection)
- (5) Connection for software update (see separate description)

1. General

The GMM series controllers are microprocessor control systems in a weather-resistant and impact-proof polycarbonate housing for the management and speed control of EC fans.

The connected fans must be EC fans!

The equipment is controlled by means of menus using a 2-line display and an input keyboard.

The control component operates as a PID controller. The PID controller (proportional-integral-derivative) consists of the P part K_p , the I part and the D part. The controller continuously compares the setpoint signal with the actual value measured and traced back and establishes a correcting variable from the difference between the two values, which influences the control route in such a way as to minimise the control deviation.

The GMM management functions ensure simple commissioning and maintenance of the EC fans and setup of the EC fans on the design point of the heat exchanger. In addition, operating and alarm messages in plain text are shown in the display.

Any changes in models meeting customer-specific requirements and hence deviating from the standard type are described separately and enclosed with these instructions. Always keep both documents together!

1.1 Classification

Güntner Motor Management for EC systems GMM EC/

01 04 08 16 = Number of control outputs for EC fans X

Code only for UL models (on mounting plate) UL

Examples:

GMM EC/01	=	Controller and motor management for 1 EC fan
GMM EC/04	=	Controller and motor management for up to 4 EC fans
GMM EC/08	=	Controller and motor management for up to 8 EC fans
GMM EC/16	=	Controller and motor management for up to 16 EC fans

Examples for Version .1 (changed functionality of digital inputs):

GMM EC/01.1	=	Controller and motor management for 1 EC fan
GMM EC/04.1	=	Controller and motor management for up to 4 EC fans
GMM EC/08.1	=	Controller and motor management for up to 8 EC fans
GMM EC/16.1	=	Controller and motor management for up to 16 EC fans

UL examples:

GMM EC/01 UL	=	Controller and motor management for 1 EC fan
GMM EC/04 UL	=	Controller and motor management for up to 4 EC fans
GMM EC/08 UL	=	Controller and motor management for up to 8 EC fans
GMM EC/16 UL	=	Controller and motor management for up to 16 EC fans

Special models are not covered by this device code.



1.2 Transport and storage, copyright notice

The controllers are packaged appropriately for transport and may only be transported in their original packaging. Avoid any impacts and collisions. Unless otherwise noted on the packaging, the maximum stacking height is 4 packs. When you receive the equipment, check for any damage to the packaging or the controller.

Store the equipment in its original packaging and protected from the weather, and avoid extremes of heat and cold.

Subject to technical changes in the interests of further development. Therefore no claims may be derived from information, images and drawings; errors excepted!

All rights, including rights created by patent grant or other registration, are reserved.

These operating instructions are the copyright of

**GÜNTNER AG & Co. KG
Fürstenfeldbruck
Germany**

1.3 Warranty and liability

The current General Terms and Conditions of Güntner AG & Co. KG are applicable. See the web site of Güntner AG & Co. KG.

1.4 Manufacturer and supplier address

If you have any questions, feedback or special requests, please contact

**Güntner AG & Co. KG
Hans-Güntner-Straße 2-6
D-82256 Fürstenfeldbruck, Germany**

**Service Telephone Germany:
0800 48368637
0800 GUENTNER**

**Service Telephone Worldwide:
+49 8141 242-4810**

Fax: +49 (0)8141/242-422

service@guentner.de

<http://www.guentner.de>

Copyright © 2009 Güntner AG & Co. KG

All rights, including rights of photomechanical reproduction and storage in electronic form, are reserved.

2. Quick guide to rapid commissioning

These pages contain the main information required for rapid commissioning of the GMM EC/01 /04 /08 or /16.

THIS QUICK GUIDE IS NOT A SUBSTITUTE FOR CAREFUL STUDY OF THE OPERATING INSTRUCTIONS!

Mains connection: **L1** to terminal **L1**
 N to terminal **N**
 PE to terminal **PE**

Fuses: There are **no** exchangeable microfuses built into the GMM for semiconductor and motor protection. The equipment must be fused with a C 2A pro phase circuit breaker provided by the customer.

A 250 V / 1 A fuse is built into the **UL** model on the 24 V side.

Fan connection: depending on the model, there are 1 to 16 bus outputs for the EC fans on the **lower PCB** on the GMM (see image page 6):

Communication interface: Terminals **A** and **B** (top row)
24 volt fan power supply: Terminals **+** and **-** (bottom row)

The fans are not powered from the GMM but are wired in an external terminal box e.g. on the GPD (Güntner Power Distribution).

Analogue inputs: on the GMM	Pressure sensor	1 (brown) on +24V
	GSW 4003	2 (green) on B1 or B2
	GSW 4003.1	2 (blue) on B1 or B2
	Temperature sensor	1 (white) on B3
		2 (brown) on GND
	Standard Signal (0...10V)	Plus (+) on B4
		Minus (-) on GND

Signalling outputs Connections for the signalling outputs see page 14.

Enabled The function of the input **D1** is to enable the controller. This input must be connected to **GND** for the controller to work and the fans to be able to turn. (This jumper is installed in the factory)

In Version .1 (see nameplate) the input **D1** has to be connected to **+24V**!

Language The default language on delivery is **English**. The display language can be changed in the Language menu option (see page 37).

Time The date and time can be set in the Time menu option (see page 38). The time, date and error code are stored in the log in the event of a fault.

The GMM is generally operational once the above settings are made.

"Manual" mode can be selected to check the functioning of the GMM. To do this, select the "Manual mode" menu option with the ▼ key and then confirm with the ► key. Scroll to the "Manual mode on" menu option using the ▲▼ keys and select the function with the <↵ key. A * appears at the end of the first line and indicates that this function is now selected. Now use the ▼ key to navigate to the control value function and select it with the ► key. The control value (0 - 100%) is displayed. This control value can now be modified by pressing the <↵ key. As soon as the change has been confirmed with the <↵ key, the fans will run with this control value.

If manual mode is deactivated again after this test, the GMM will revert to the set mode.

Mode	The default mode setting is " Automatic internal ". This means that the controller controls to the defined setpoint. For this to be possible, a setpoint must be entered (see page 34) and the input for the actual value must be defined in the I/O configuration (see page 53). The control parameters Kp, Ti and Td can still be modified in the service menu.
Limiter	The speed of the fans can be limited e.g. to limit noise emissions at night. This value is set in the Night setback menu option. The night setback is activated either via input D2 or via the timer which is programmed in the Night setback menu option (see page 35).
Setpoint switchover	It is possible to choose between two setpoints (e.g. for summer and winter operation). The switchover is effected via input D3 .

The "**Limiter**" and "**Setpoint switchover**" functions generally need to be activated in the service menu (see page 47).

3. Installation of the GMM, cabling

3.1 EMC-compliant installation

The GMM EC/01-16 series controllers meet the requirements of resistance to EMC interference in accordance with EN 61000-6-2 and emissions in accordance with EN 61000-6-3.

They also comply with standards IEC 61000-4 -4/-5/-6/-11 for grid-bound interference. In order to guarantee EM compatibility, the following points must be noted:

- The equipment must be properly earthed with a wire of min. 1.5 mm²
- All measurement and signalling cables (only use measurement cables e.g. LIYCY 3x0.5², not telephone cables!) must be shielded.
- A special cable must be used for bus wiring to the EC fans.
e.g. HELUKABEL DeviceNet PUR flexible 1x2xAWG24 + 1x2xAWG22 / 81910
- The shielding of measurement, signalling and bus cables must be earthed *unidirectionally*.
- Signalling and control cables must be laid separately from mains and motor cables e.g. in separate cable ducts.

3.2 Installation of the controller, ventilation

If the equipment has been taken from a very cool storage location, leave it at room temperature for 1-2 hours before installation with the lid open to allow any residual moisture to disperse and hence avoid malfunctions during commissioning. The equipment may only be commissioned when it is absolutely dry. The sachet of silica gel (desiccant sachet) must be removed.

Once the equipment has been commissioned for the first time, the power supply and the internal control voltage must no longer be switched off for a long period. If this should nevertheless be necessary for operational reasons, suitable moisture protection must be provided.

There are 4 fixing drill holes in the housing for installation. The equipment may only be fixed at these points, any manipulations of the housing (e.g. drilling new fixing holes) is prohibited.

The cable entries must always be underneath; installation with cable entries at the side or even on top is not permitted!

If moisture problems occur in the housing owing to considerable external heating and cooling, the moisture must be dispersed by means of an air adjustment (cable screw with adjustment opening).

Keep an eye on good accessibility! The equipment must be easily accessible for any maintenance work.

Note:

- If the equipment is installed in a switch cabinet, the temperature inside the switch cabinet **must** be heeded (see permissible ambient temperature page 63).
- A hood is prescribed if the equipment is installed in the open air.
- Install the GMM out of direct sunlight and choose a location with the best possible protection against the elements.

3.3 Cable laying, shielding

In principle **sensor cables** and **bus cables** must be laid separately from the motor and mains cables i.e. not in the same cable duct. Shielded cable must be used.

4. Connection

The connector terminals for the potential-free signalling outputs, the control inputs (controller enable etc.) and sensors are located on the upper PCB. The mains connection and bus cables to the EC fans are located on the lower PCB. The power supply (single-phase 230 V or 3-phase 400 V) for the fans is located in a separate small switch cabinet.

4.1 Controller mains connection

The mains connection for the controller is on the following terminals:


L1	= Phase conductor
N	= Neutral conductor
PE	= Earth conductor

The connector terminals are designed for a maximum cable cross-section of 2.5 mm².

The supply must be fused with automatic cable protectors with characteristic "C 2".

In the **UL** model, the GMM is connected to the 115/230 V AC 50/60 Hz "control voltage" grid. Always observe corresponding local **UL** regulations.

IMPORTANT: The heat exchanger fans must not be switched on/off by switching the mains on/off, but only via the switch.

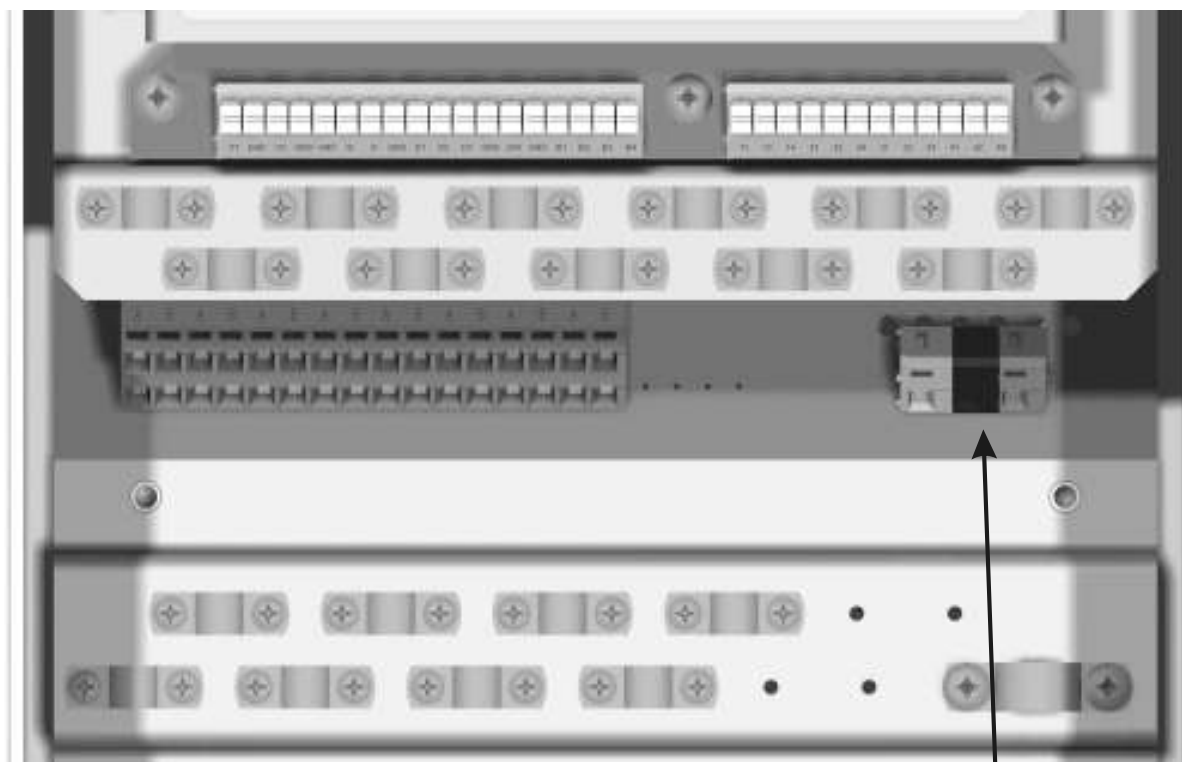

Mains
connection

Fig. 4.1.1: GMM mains connection

4.2 Controller fan connection

The connection for an EC fan consists of the power connection (single-phase 230 V or 3-phase 400 V) and the control connection (bus and DC power support for the fan electronics).

Power connection:

The power connections are not located in the GMM but in a separate connection box (e.g. GPD).

Control connection:

The communications and the DC power supply for the fans are connected on the GMM's double-level terminal block (see point 3 on equipment connection diagram page 6).


Depending on the model, there are 1 to 16 control connections for the EC fans on the lower PCB.

On the terminal block (see image bottom left), there are 2 terminals for the bus communications and 2 terminals for the power supply for each fan. The fan groups are identified on the PCB under the terminal block. The top row is used for the communications wiring and the bottom row for the power supply to the electronics in the EC fans.

Communications connection: Terminal **A** (white) and **B** (blue) **top row**

24 volt power supply: Terminal **+** (red) and **-** (black) **bottom row**

The connector terminals are designed for a maximum cable cross-section of 2.5 mm².

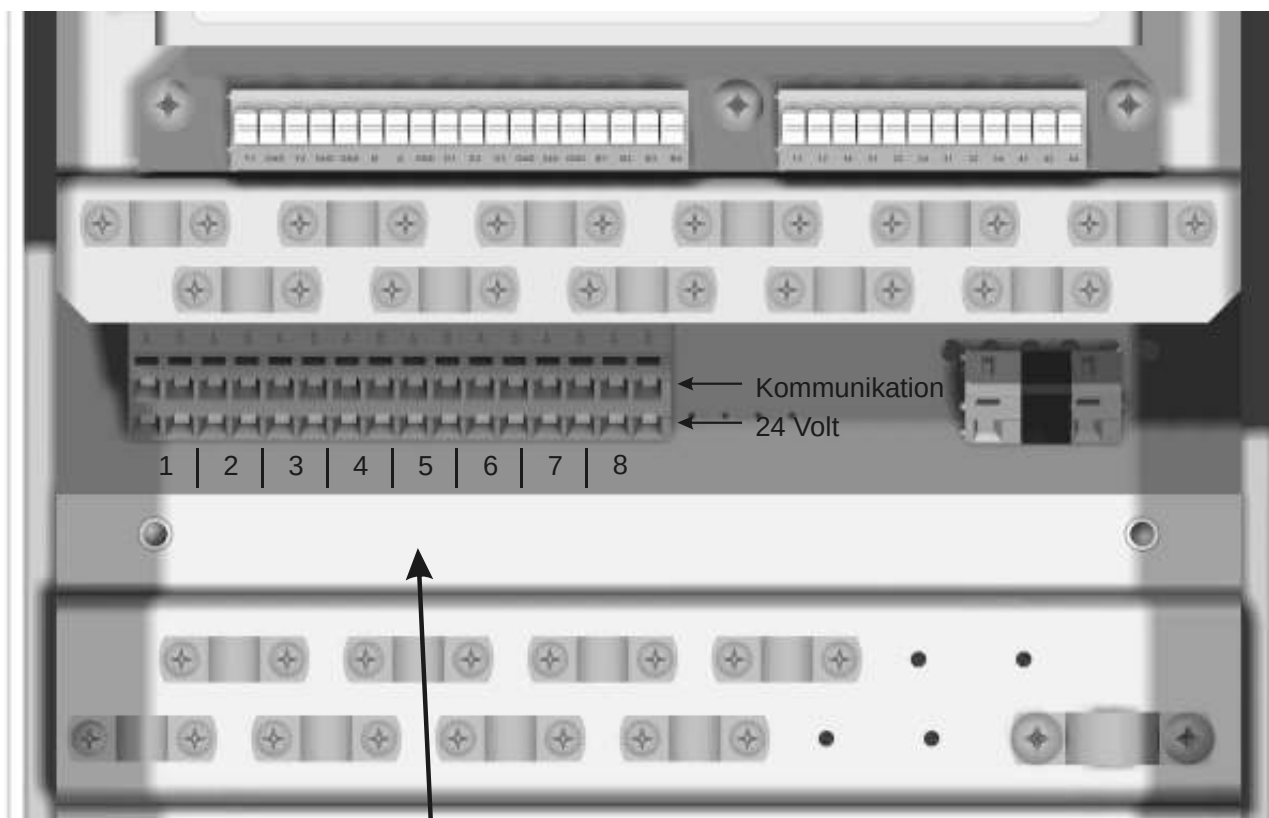

Fan
connections
1 ... 8

Fig. 4.2.1 GMM fan connections

5. Potential-free signalling outputs

For safety reasons, the potential-free signalling outputs (two-way contacts) are designed such that the corresponding signalling relay *drops out* i.e. the break contact of the corresponding two-way contact closes, when an event occurs. As a result a fault is also reported when a fault causes the power to the GMM to be interrupted (e.g. failed power supply).

5.1 Digital output (11/12/14) (priority 1 alarms)

All signals on the **Priority 1** output are faults signalling the complete failure and shutdown of the heat exchanger.

The signalling relay has contacts 11/12/14. An alarm is signalled in the following situations:

- e.g.: all fans have failed (hardware error)
- Error messages and alarm assignment see **15. Table of error messages and warnings on the GMM display**

If an alarm occurs, the signalling relay is switched (drops out) i.e. the two-way contact 11/12 closes. The load on this potential-free contact must not exceed 250 V / 1 A.

5.2 Digital output (21/22/24) (priority 2 alarms)

All signals on the **Priority 2** output are events that do not result in the complete failure of the heat exchanger. These are warnings that the operation of the heat exchanger is impaired.

The signalling relay has contacts 21/22/24. A warning is signalled in the following situations:

- e.g. sensor faults or a failed fan (in equipment with multiple fans)
- Error messages and alarm assignment see **15. Table of error messages and warnings on the GMM display**

If a warning occurs, the signalling relay is switched (drops out) i.e. the two-way contact 21/22 closes. The load on this potential-free contact must not exceed 250 V / 1 A.

5.3 Digital output (31/32/34) (in operation)

The signalling relay has contacts 31/32/34. The two-way contact 31/34 closes when a control signal is sent to the fans i.e. the fans are operational.

5.4 Digital output (41/42/44) (threshold)

You can set a threshold on the GMM. If the control value from the GMM to the fans exceeds this threshold, signalling relay 4 (contacts 41/42/44) is tripped. This can be used, for example, to switch a solenoid valve, control an actuator, activate a spray etc.

The threshold is not a FAULT, it is just a 2-point controller with an adjustable switching point. Do not add this contact to your fault report!

As soon as the set threshold is exceeded, the two-way contact 41/42 is closed. The load on this potential-free contact must not exceed 250 V / 1 A.

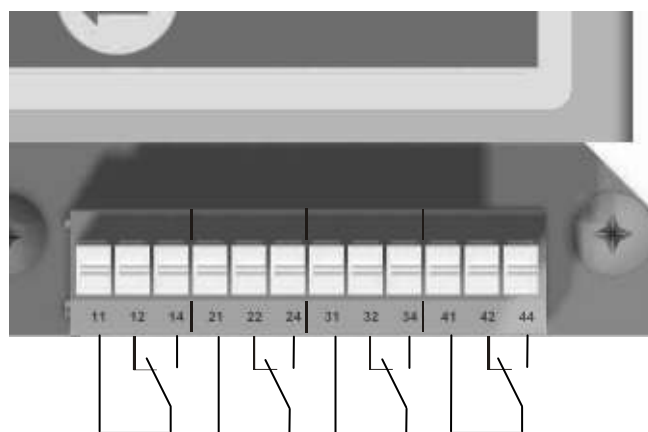


Fig. 5.4.1: Signalling outputs

6. Control inputs


The control inputs are designed as a **low-voltage connection** and are connected via a potential-free contact (relay, contactor contact, switch etc.). The potential-free contact must be switched between the **GND** terminal or **+ 24 V** (depending on unit design) and the control input **D1** or **D2** or **D3** (see figures below). The function is activated when the contact is closed.

There are two versions of the GMM EC with different circuiting of the digital inputs.

Types: GMM EC01.1, GMM EC04.1, GMM EC08.1, GMM EC16.1

The current version GMM ECxx.1 can be recognized at the 2 additional +24 V terminals.

Types: GMM EC01.1, GMM EC04.1, GMM EC08.1, GMM EC16.1

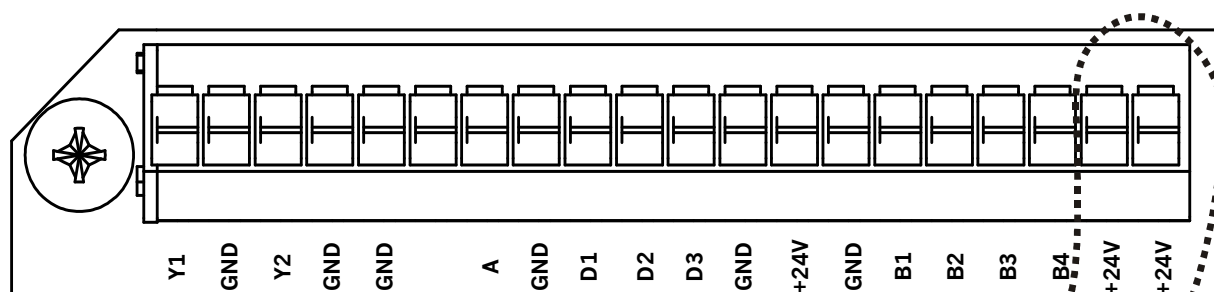


D1..D3 are activated with +24 V

2 additional +24 V terminals from version GMM ECxx.1

The version GMM ECxx has no additional +24 V.

Types: GMM EC01 , GMM EC04 , GMM EC08 , GMM EC16

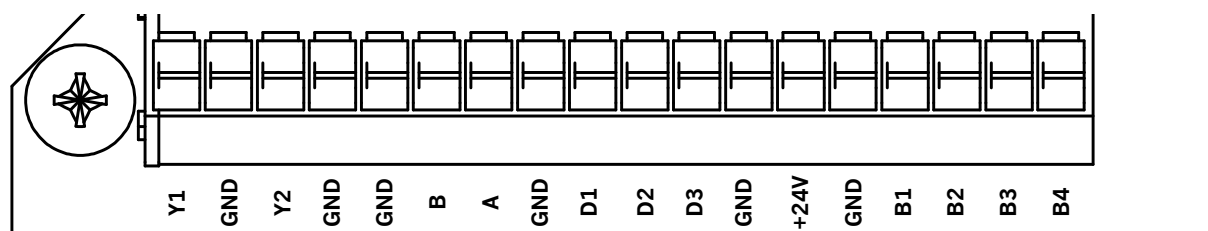

D1..D3 are activated by GND

Warning: Wrong connection can lead to destruction!

Under no circumstances the mains voltage may be connected to the digital inputs, or external voltage applied.

6.1 Enabling the GMM


The fans are enabled via terminal "D1" (enabling). The speed then depends on the control value. If the GMM is not enabled, the fans are disabled (speed = 0).

If the GMM is not to be enabled externally, terminal D1 must be connected using a jumper!

This enabling jumper is always built in at the factory.

Warning: Wrong connection can lead to destruction!

GMM EC01 .1 , GMM EC04.1 , GMM EC08.1 , GMM EC16.1 (see nameplate)

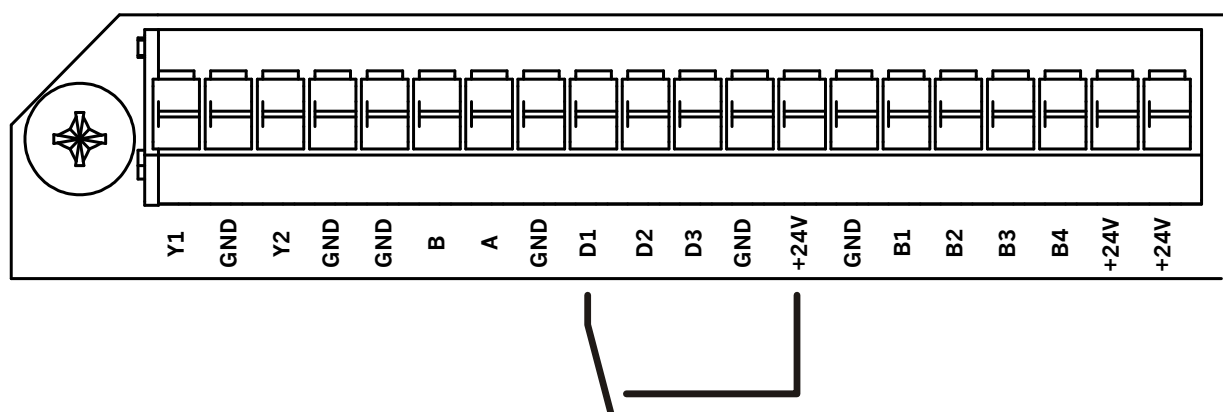

GMM EC01 , GMM EC04 , GMM EC08, GMM EC16 (see nameplate)

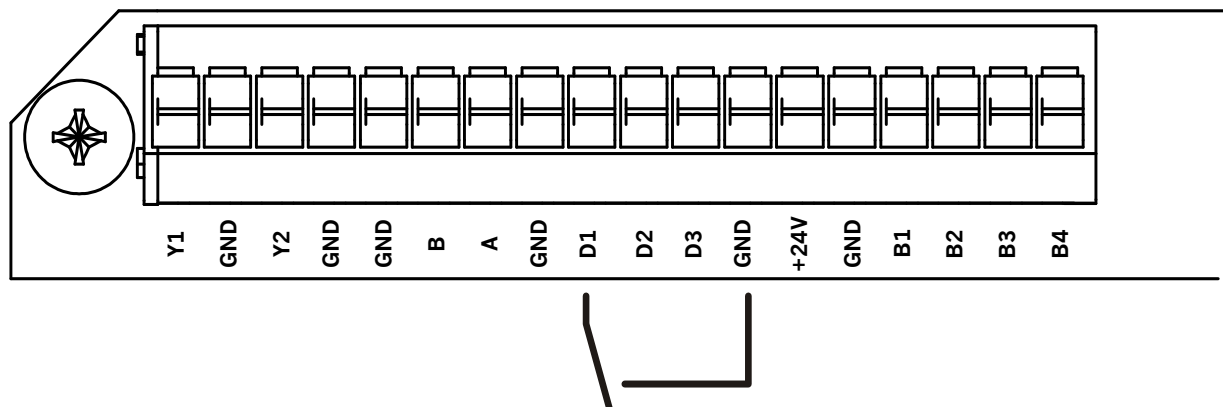


Fig. 6.1.: Connecting the external enabling contact


IMPORTANT: Under no circumstances may the controller be disabled by interrupting the mains voltage! Continuous switching of the supply voltage can lead to damage to the controller that is not covered by the warranty!

6.2 Speed limiter (night setback)

The (night) speed limiter is activated via terminal "D2". If this terminal is connected, the control signal, and hence also the fan speed, is limited to the adjusted value. The GMM will not exceed the speed set there. For setting the speed limiter, see section **10.2.3 Setpoints** and for general activation see section **10.3. Service**.

Warning: Wrong connection can lead to destruction!

GMM EC01 .1 , GMM EC04.1 , GMM EC08.1 , GMM EC16.1 (see nameplate)

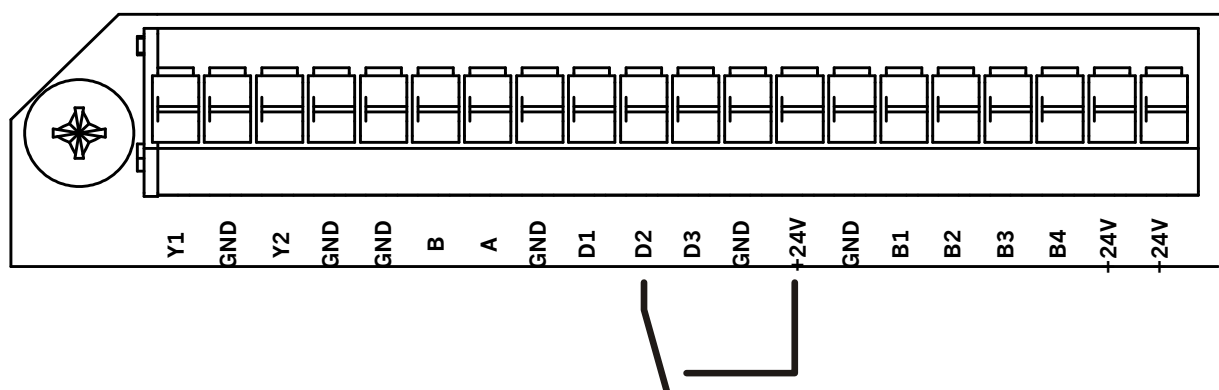

GMM EC01 , GMM EC04 , GMM EC08, GMM EC16 (see nameplate)

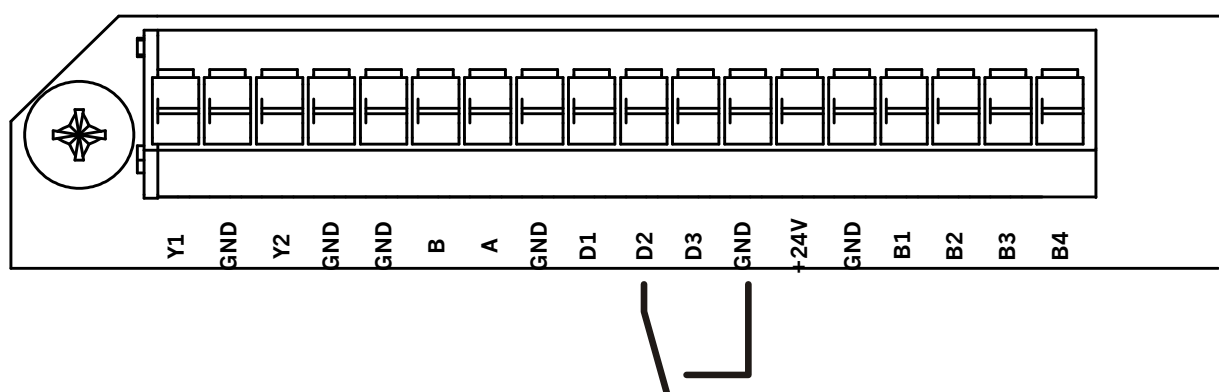


Fig. 6.2: Activating the speed limiter


6.3 Switching to 2nd setpoint

The second setpoint, the second setpoint shifting and the second threshold are activated via terminal "D3". This allows you to select two different control characteristics (e.g. summer and winter mode) via one input.

If this terminal is blank, **control system 1** is always active. Ex works, this connection is blank (open).

Warning: Wrong connection can lead to destruction!

GMM EC01 .1 , GMM EC04.1 , GMM EC08.1 , GMM EC16.1 (see nameplate)

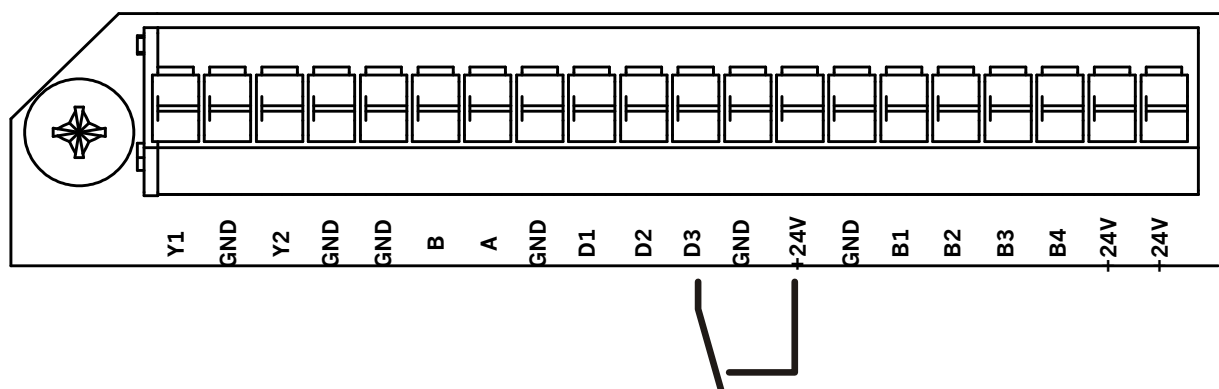

GMM EC01 , GMM EC04 , GMM EC08, GMM EC16 (see nameplate)

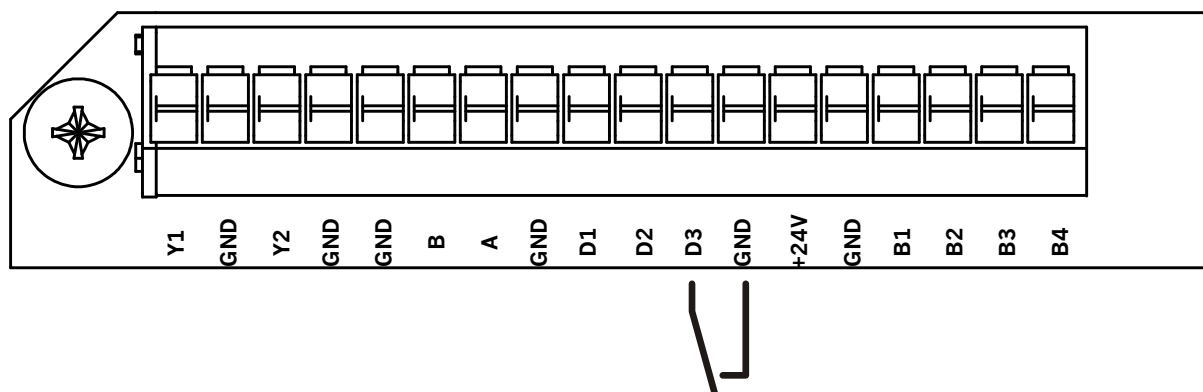


Fig. 6.3: Switchover from control system 1 to control system 2

7. Analogue inputs

The GMM has four analogue inputs. Two of these four inputs are current inputs (4 - 20 mA) (**B1** and **B2**). One input **B3** is an input for impedance sensors (PTC/**KTY81-210**). A voltage source of 0 - 10 V DC can be connected to the fourth input **B4**.

In the following the possibilities are described, how the inputs can be used and how they have to be connected.

Warning: Wrong connection can destroy the analogue inputs!

The 4-20 mA inputs may not be connected to 0-10V DC or directly to +24V, nor may their poles be reversed.

7.1 Connection of a pressure transmitter to B1/B2

1 or 2 sensors (2-wire sensors) can be connected:

+24V	= Common supply voltage	(GSW4003.1: brown (1), GSW4003: brown (1))
B1	= 4-20mA signal from sensor 1	(GSW4003.1: blue (3), GSW4003: green (2))
B2	= 4-20mA signal from sensor 2	(GSW4003.1: blue (3), GSW4003: green (2))

If you connect two pressure transmitters and both pressure transmitter inputs are configured for internal control in the I/O configuration (see **10.3.7 I/O configuration**, the greater signal is forwarded to the control system and used for speed control (MAX - select between the two pressure transmitters).

NOTE: Older 3-wire sensors with a 4-20 mA signal output can also be connected but also require an earth potential. You can tap this from the **GND** terminal.

Important for pressure sensors

Do not install the sensor in the immediate vicinity of the compressor to protect it from large pressure impacts and vibrations. It should be installed as close to the condenser inlet as possible.

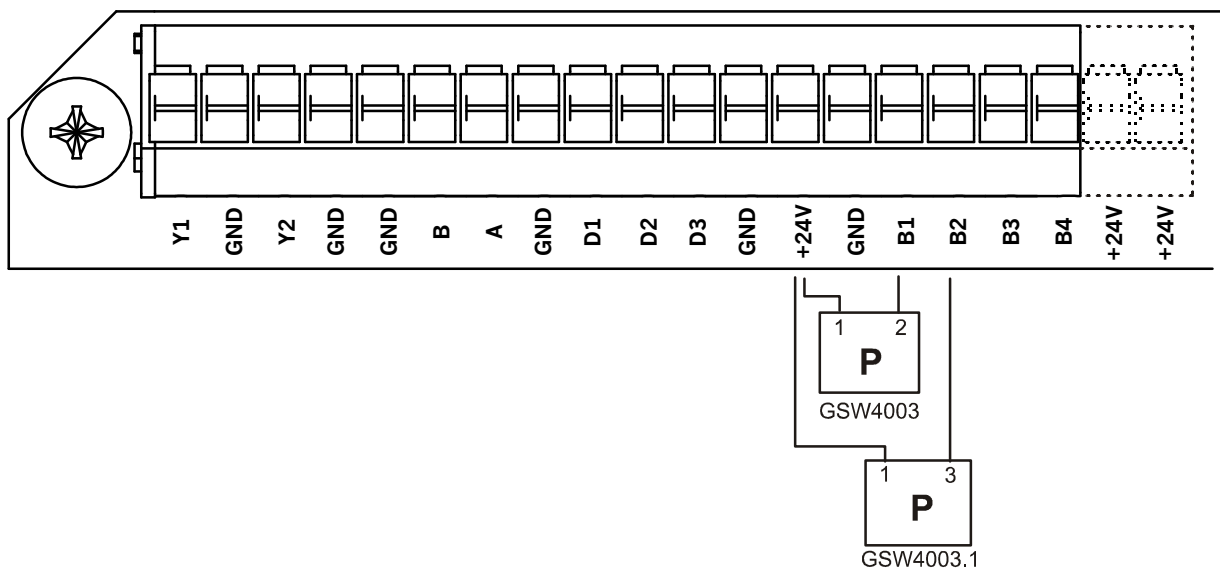


Fig. 7.1: Connection pressure transmitter

7.2 Connection to external current sources at B1/B2

Up to two current sources (4 .. 20mA) can be connected to the analogue inputs **B1** and **B2**:

The inputs B1 or B2 can be used to operate the controller in slave mode. For this purpose, the input must be defined as slave input in the I/O configuration.

The input signal 4..20mA is scaled 0-100% in a control signal and is passed on to the fans.

You can also define a setpoint externally via the inputs B1 or B2 e.g.

- GND** = Earth (—)
- B1** = mains in (+) 4 .. 20mA
- B2** = mains in (+) 4 .. 20mA

Important:

Observe correct polarity of current source!

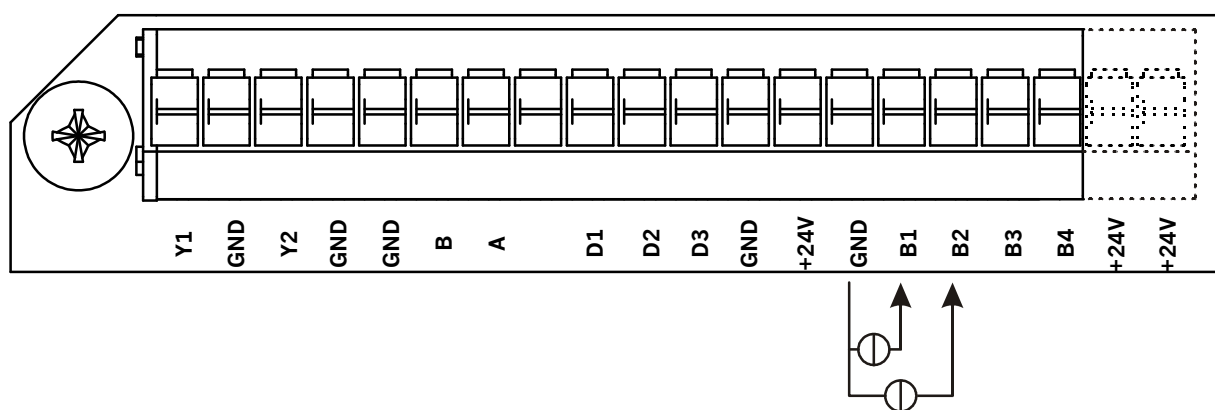


Fig. 7.2: Connection to current source

For the current inputs it has to be observed, the currents smaller than **2mA** or higher than **21mA** lead to reporting of sensor malfunction.

7.3 Connection of temperature sensor B3

A temperature sensor is always connected on the following terminals:

GND = Earth

B3 = Signal input

There is no particular sequence for the cores.

The Güntner GTF210 temperature sensor is used in a range from -30°C to +70°C. Please contact us for other temperature ranges. For other temperature ranges, please contact us.

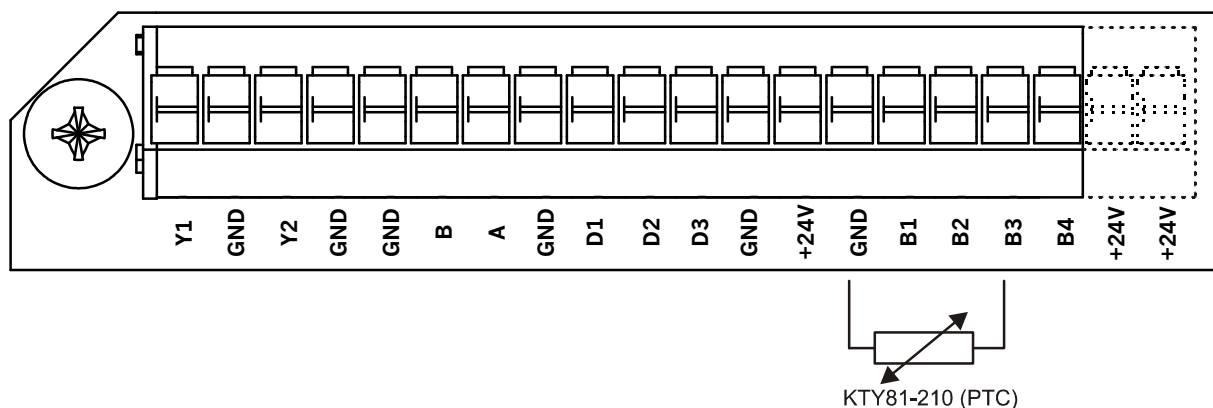


Fig. 7.3.1: Connection temperature sensor

To test a temperature sensor that may be defective, you can disconnect it from the controller and measure the impedance of the sensor (with an ohmmeter or multimeter). On the GTF210, the impedance should be between 1.04 k Ω (-50°C) and 3.27 k Ω (+100°C). You can use the table below to check whether the sensor has the correct impedance at a known temperature.

Impedance	Temperature	Impedance	Temperature
1040 Ω	-50°C	2152 Ω	35°C
1095 Ω	-45°C	2230 Ω	40°C
1150 Ω	-40°C	2309 Ω	45°C
1207 Ω	-35°C	2390 Ω	50°C
1266 Ω	-30°C	2472 Ω	55°C
1325 Ω	-25°C	2555 Ω	60°C
1387 Ω	-20°C	2640 Ω	65°C
1449 Ω	-15°C	2727 Ω	70°C
1513 Ω	-10°C	2814 Ω	75°C
1579 Ω	-5°C	2903 Ω	80°C
1645 Ω	0°C	2994 Ω	85°C
1713 Ω	5°C	3086 Ω	90°C
1783 Ω	10°C	3179 Ω	95°C
1854 Ω	15°C	3274 Ω	100°C
1926 Ω	20°C	3370 Ω	105°C
2000 Ω	25°C	3467 Ω	110°C
2075 Ω	30°C		

Fig. 7.3.2 Temperature/impedance table

7.4 Connect 0-10V standard signal to B4

A standard signal (0-10V) is always connected on the following terminals

GND = Earth (negative)

B4 = Signal input 0-10V DC (**max. 12V DC**)

Make sure the polarity is correct (earth to **GND**, signal to **B4**)!

The 0-10V input is mostly used to operate the controller in slave mode. To do this, this input must be defined as a slave input in the I/O configuration. The 0-10V input signal is scaled 0-100% in a control signal and passed on to the fans.

As an alternative, you can also connect a GHP manual potentiometer as a remote control. The connecting terminals on the GHP are labelled with either **1/2/3** or **+/-/Y**.

+ or 3 on **+24V**

- or 1 on **GND**

Y or 2 on **B4**

You can then use the speed controller purely as a speed adjuster and specify the fan speed yourself manually.

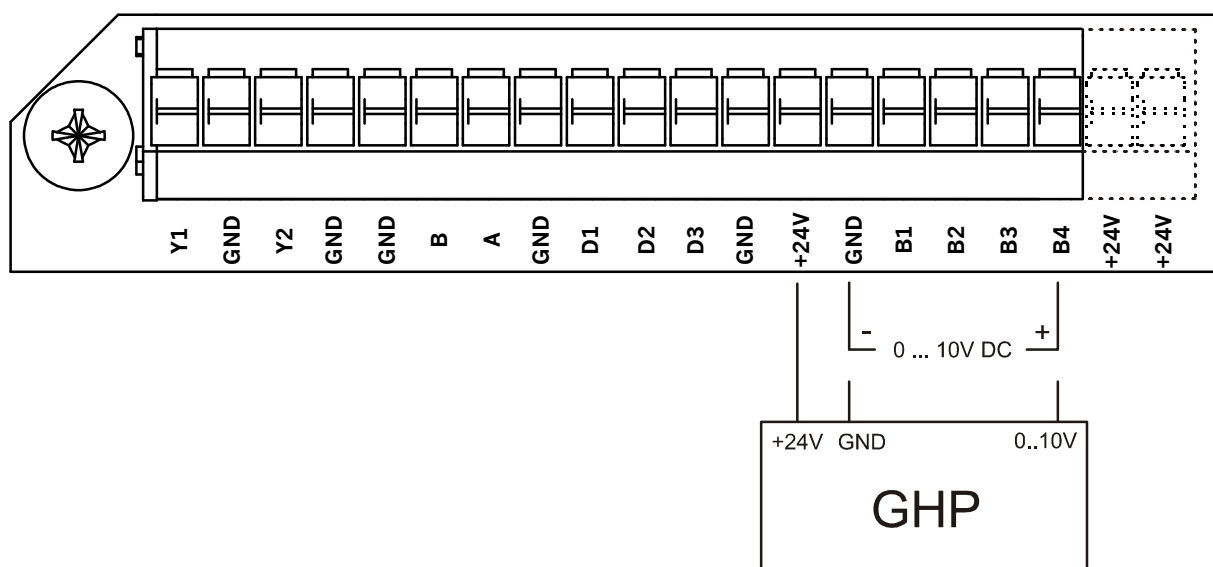


Fig. 7.4: Connection standard signal 0-10V

8. Analogue outputs

The control unit has 2 analogue outputs with 0..10V output voltage.

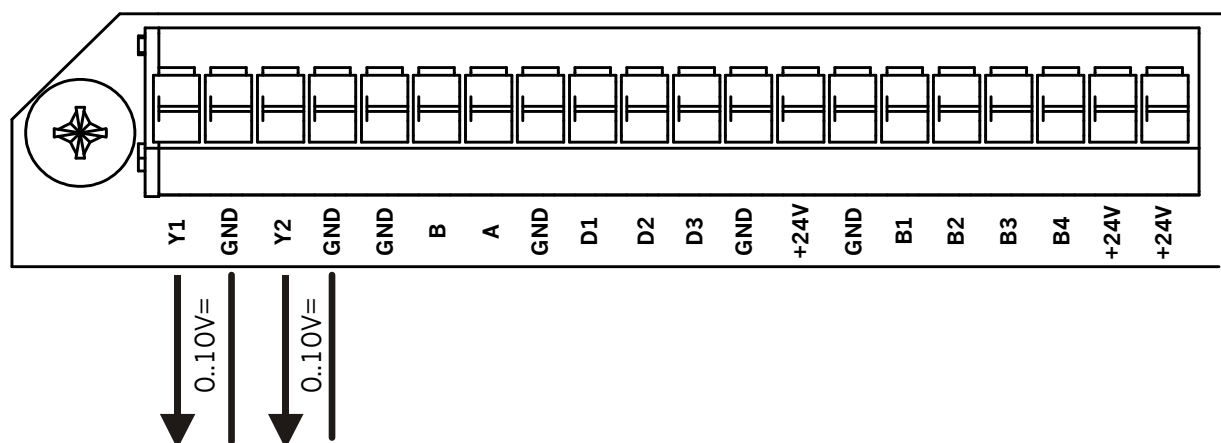


Fig. 8: Analogue outputs

Output **Y1** issues the control signal (0..100%) scaled on 0..10V.

Output **Y2** issues the control signal for a subcooler, if this function is activated. 0..10V corresponds here with a control value of 0..100%.


9 Commissioning the GMM

With the GMM, the fans are controlled via a bus. These fans must be set up and checked for the condenser or drycooler depending on the design of the heat exchanger. These settings and checks are necessary on initial commissioning and possibly when a fan is changed. The power and volume of the heat exchanger are defined by this commissioning. The chapter **16. Table of Fan IDs and VT numbers** shows the fan ID and fan type for various heat exchangers.

The GMM automatically detects whether commissioning has been carried out when it is switched on. If it has, the commissioning menu is skipped and normal operation continues.

9.1 Start-up menu


The default language for commissioning is English, even if a different language has been selected for the display. However, the commissioning language can be freely selected and only applies to the commissioning menu.

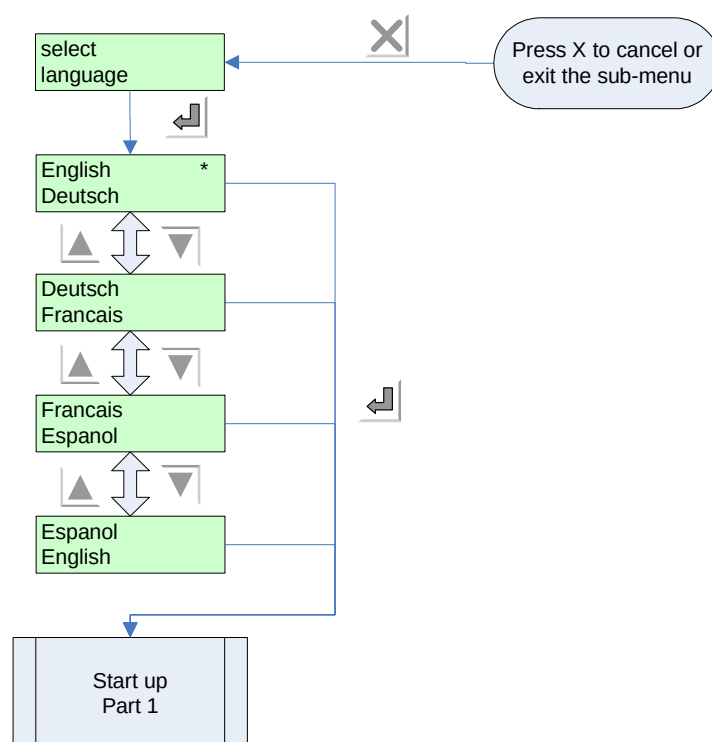


You can exit the start-up menu at any time by pressing the "X" key.

Once the language has been selected, the number of fans is queried next.

Once the number of fans has been entered, the GMM searches for the connected fans. The flashing * shows the search progress. If the number of fans is not the same as the number entered, an error message returned.

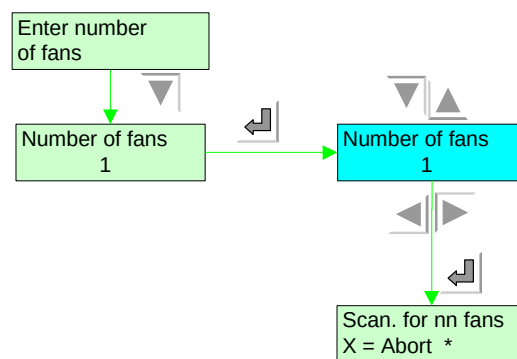

If the number of fans found does not match the number entered, the following menu option appears.

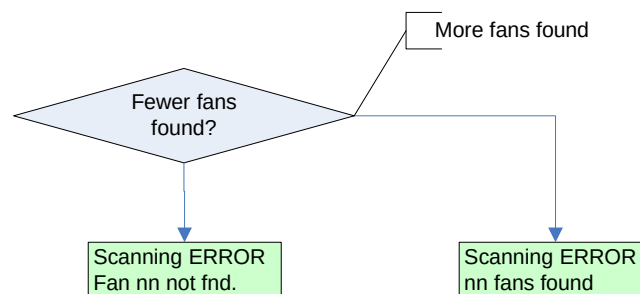


If fewer fans are found, the numbers of all the fans not found are displayed.

On the other hand, if more fans are found, the total number of fans found is displayed.


If the search is successful i.e. the specified number of fans is found, the VT numbers of the fans is read out. The VT number is the type designation of the motor.

If the VT numbers of all the fans are not the same, the VT numbers with discrepancies are output.

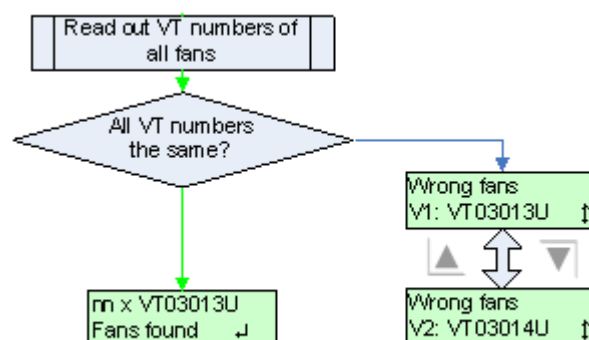


It is then not possible to continue commissioning since all the fans must have the same VT number. It is now essential to change the fans with the incorrect VT number. The VT numbers are printed on the type plate of the fans.

If all the VT numbers of the fans are now the same, the ID number of the fans is entered in the next step. The ID number represents the working point of the fan for the heat exchanger. For the corresponding fan ID, please refer to the wiring diagram of the heat exchanger or to chapter **16. Table of Fan IDs and VT numbers**.

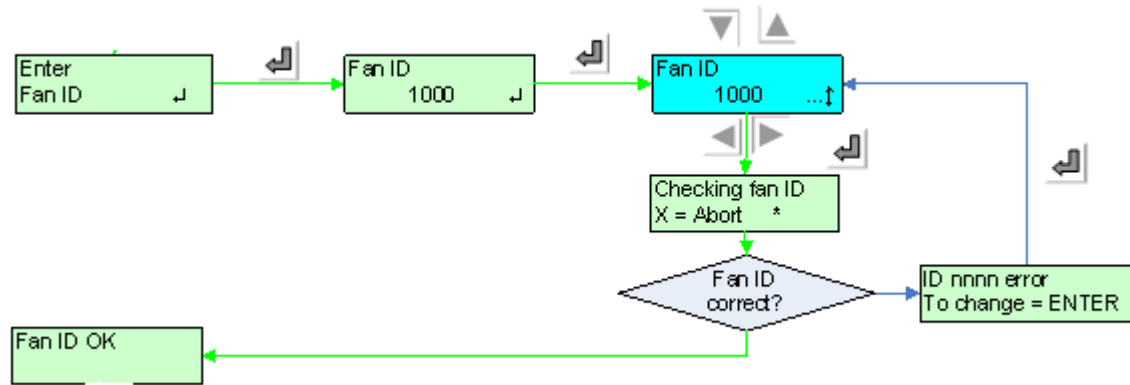

As an example, fan ID **1000** has been entered here. On initial commissioning, the smallest fan ID is proposed. If this point (ID input) has been completed before, the last ID number entered is proposed.

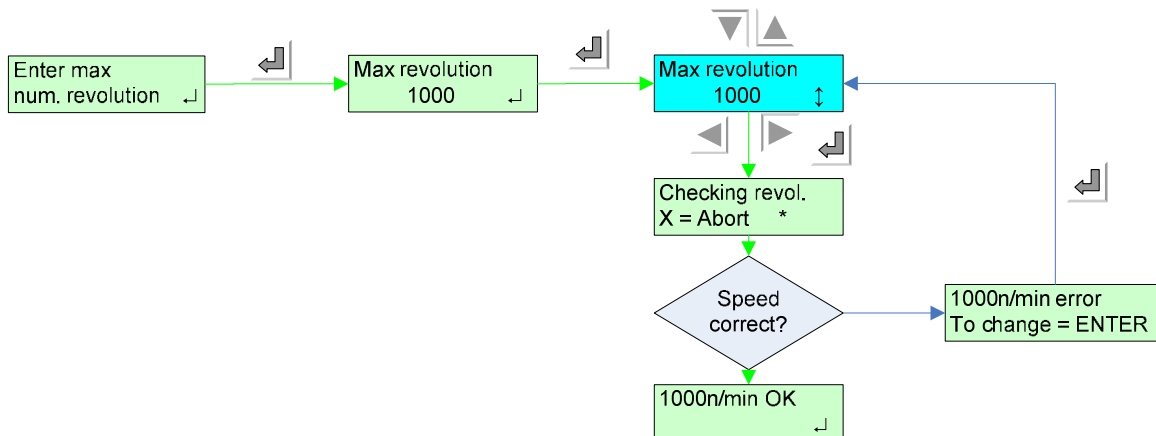


After input, the **GMM** checks the fan ID. The text cycle is indicated by a flashing * in the display. If the fan ID is incorrect, you are prompted to make a correct input. Press the **"ENTER"** key to return to the ID input. However, you can also abort the process by pressing the **"X"** key. If you abort the process, commissioning is not yet complete and normal operation will not be started. Commissioning must first be performed completely.

If the appropriate fan ID is found, you are prompted for the maximum permissible speed for the heat exchanger (depending on the design point).

In the example above, a maximum speed of 1000 rpm has been entered. This speed will be checked.

If it is incorrect i.e. it does not match the speed specified by the ID, you will be prompted to modify the input. Once the modified speed has been entered, it is checked and may be acknowledged with the message "Speed OK". Otherwise you will be prompted again to correct the input.

If the maximum speed is correct, you will be asked for the heat exchanger type.

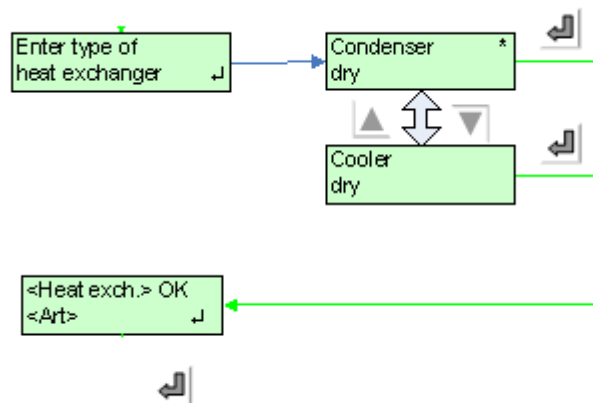

A condenser (e.g. GVH etc.) or a drycooler (e.g. GFH etc.) may be set up.

If a condenser has been selected, you will be asked for the refrigerant in the next step. There is a choice of 10 refrigerants. If "bar" is selected, the pressure will be displayed in normal operation. When a refrigerant is selected, the condensing temperature corresponding to the pressure will be displayed. The selected refrigerant or "bar" are marked with a "*".

The default value is "**bar**".

If a drycooler is selected, the temperature of the refrigerant in normal operation is displayed.

If all the parameters have now been entered, they are saved. This takes a few seconds.

This completes commissioning and the GMM displays the "INFO" menu.

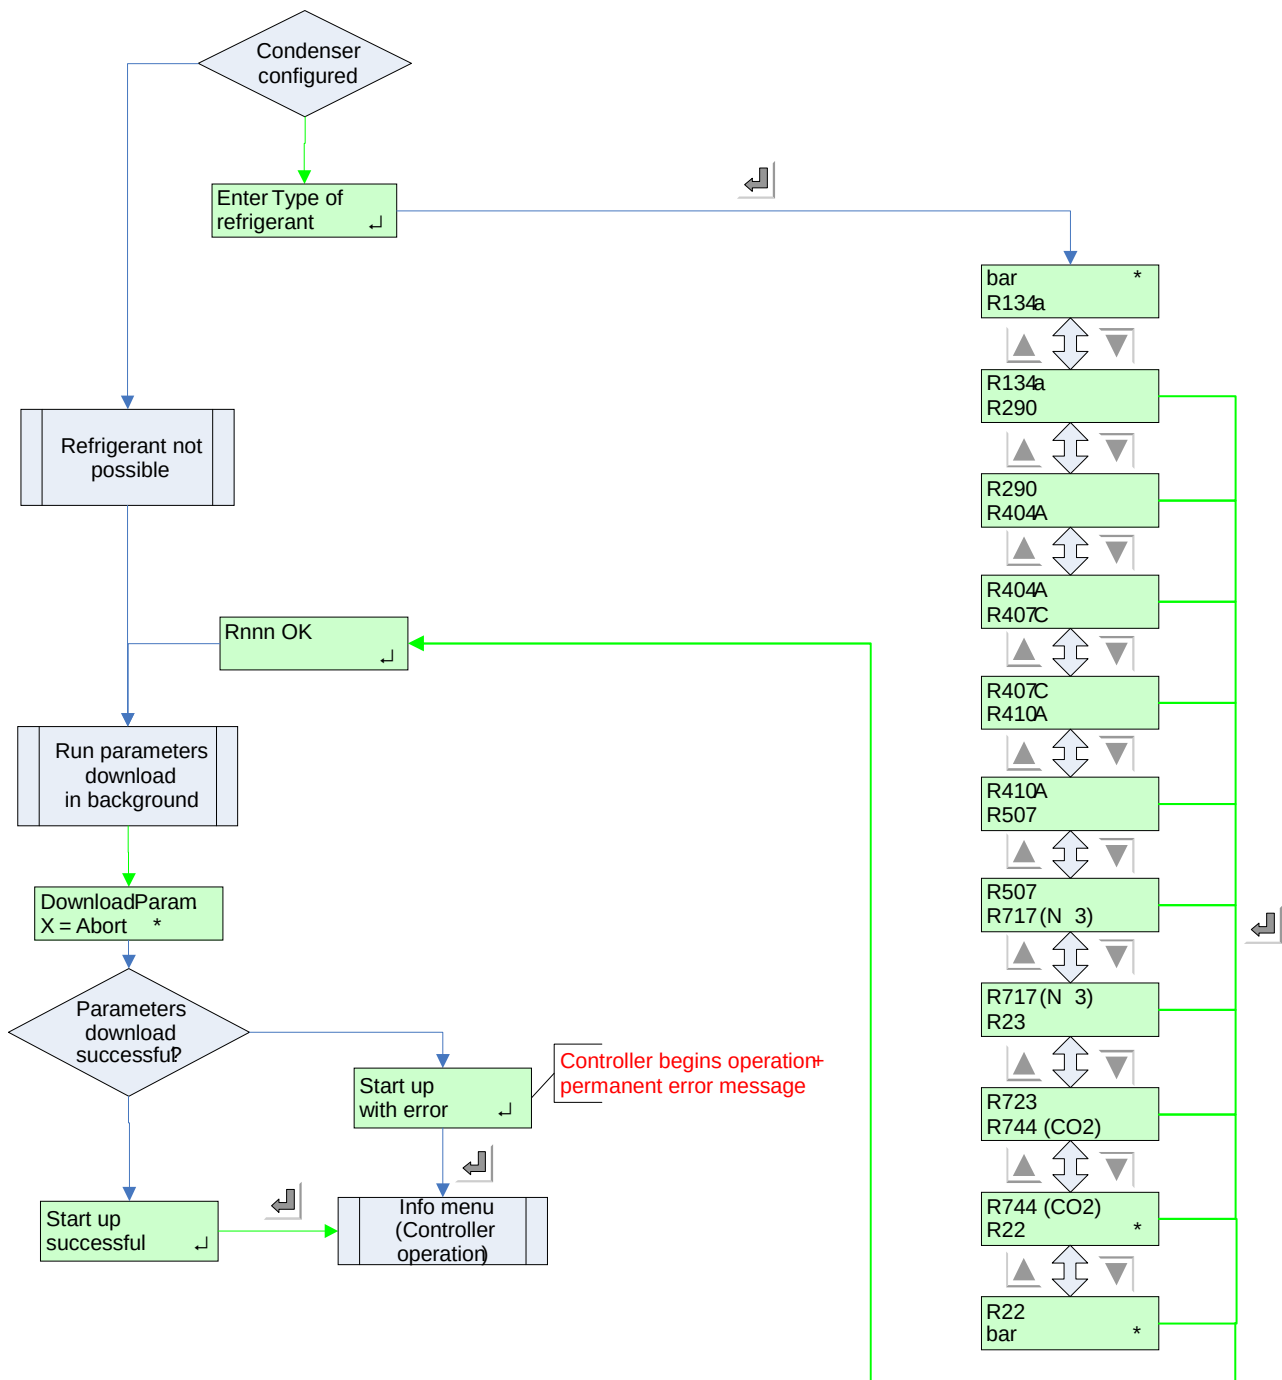


Fig. 10.1 Selection of refrigerant

10. Display and operation

Information is shown on a 2-line display with white text on a blue background. A membrane keyboard is used for input and to operate the controller.

10.1 Info menu

Setpt.	xx.x°C				
act val	xx.x°C	A			
SP rel.	xx.xbar				
AV rel.	xx.xbar	A			

The **setpoint** is displayed in the first line of the info menu. It can be displayed as a pressure or temperature value depending on the cooler type (condenser or drycooler) and whether or not a refrigerant is specified for the condenser. The following display assignments are possible:

		Display
Condenser:	no refrigerant	Pressure (relative)
	refrigerant	temperature Refrigerant-dependent
Drycooler:		temperature

The **actual value** is displayed using the same assignment in the second line of the display.

The last character in the second line of the display indicates the **operating mode** of the controller. The following displays are possible:

A	Automatic mode	Static display
S	Slave mode	Static display
H	Manual mode	Static display
F	Priority 1 error	Alternating with default display
W	Priority 2 warning	Alternating with default display

Fig. 10.1.1: Error display abbreviations

A Automatic mode	In this mode, the actual value (relative pressure, temperature) follows the defined setpoint.
S Slave mode	In this mode, there is no separate control; instead the setpoint for the fans is supplied externally, normally via the 0-10V input where 10 volts is equivalent to 100% modulation.
H Manual mode	In this mode, the setpoint (in %) for the fans is displayed. The value is entered via the control panel.

- F Error** This status display appears alternating with the mode (A/S/H) and indicates a priority 1 error (centralised fault / fan and hardware error)
The error is also displayed as plain text in line 2, again alternating with the actual value.
- W Warning** This status display appears alternating with the mode (A/S/H) and indicates a priority 2 warning (sensor fault).

In addition to the error messages in plain text, controller switching functions are displayed in alternation with the actual value.


These are the two messages **-Night setback-** and **-Disabled-**.

The **Night setback** message appears when the max. control value of the controller is limited.

The **Disabled** message appears when input **D1** is not connected to **GND** (from **version .1** with **+24V**), i.e. the controller is deactivated.

You can navigate through the menu using the membrane keyboard. The right hand side of the display shows information on which keys can be used.

- <J Enter key for entering values or activating a function.
- > Right arrow for moving to the next menu level.
- < Left arrow for moving to the previous menu level.
- ↑ Up/down arrow for scrolling through the menu level.

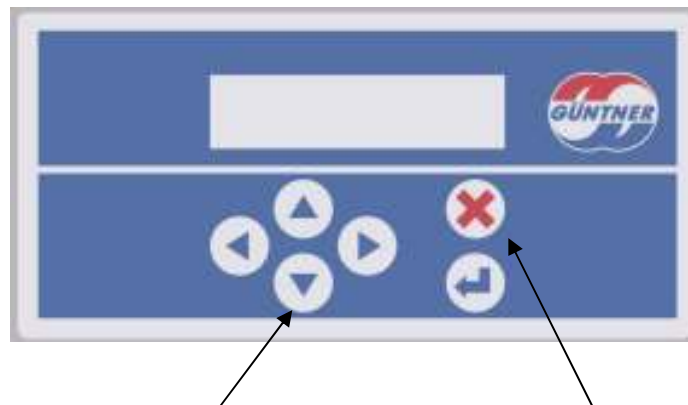

Use this key to move from the **INFO** menu to the **Operating menu**.

Use this key to return to the **INFO** menu at any time.

Fig. 10.1.2: Controls


10.2 Operating menu

A selection of menu options are displayed in the operating menu. You can use the ► key to move to the menu option displayed in the first line.

The individual menus are selected using the ▲▼ keys.

If you want to edit values, enter EDIT mode by pressing the <J key. There you can use the ◀▶ keys to select the item for which the value should be modified.

The keys that can be selected are displayed in the last character of a line in every menu.

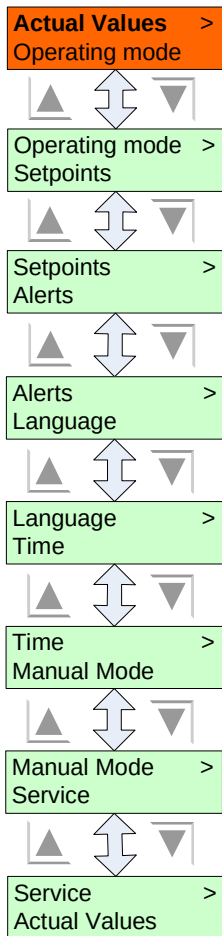

10.2.1 Actual values

The current values for input signals, control values, fan speed and power are displayed here.

10.2.1.1 Input actual values

Multiple values are displayed when the Actual values menu option is opened. The measured pressure, the temperature or the 0-10V control signal is displayed first. The value shown depends on the cooler type (condenser or drycooler) and the control mode (automatic or slave).

Condenser no refrigerant

Condenser refrigerant selected

Drycooler

Slave via 0-10V

CDS press
nn.n bar ↑

CDS temp
nn.n °C ↑

Outlet temp.
nn.n °C ↑

Input 0-10V
nn.n V ↑

10.2.1.2 Control value

The control value of the controller delivered to the fans is displayed in percent.

Control value
nn % ↑

10.2.1.3 Air volume

This displays the average control value of all fans in percent. This value is fed back by the fans.

Air volume
nn %

10.2.1.4 Overall power


This displays the link power of all connected fans. The power is calculated from the intermediate circuit voltage and the intermediate circuit current

Unit
nn A nn W ↑

More information on each individual fan can be queried under the next menu options.


10.2.1.5 Fan speed

The current fan speed of each individual fan is displayed here. The list length is limited by the number of fans connected.

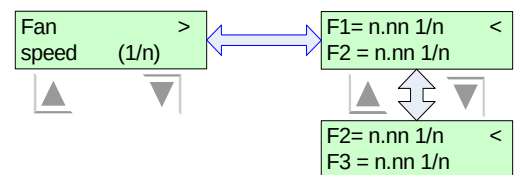


10.2.1.6 Fan power


The current power of any fan, calculated from the intermediate circuit voltage and the intermediate circuit current, is displayed here.

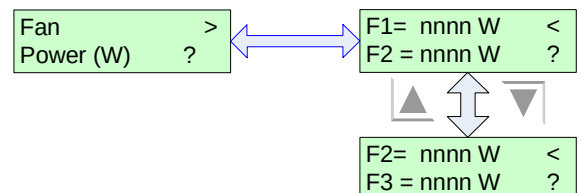

10.2.1.7 Fan operating hours

The operating hours of every EC fan are displayed.

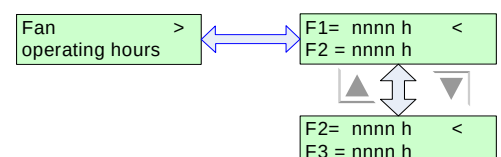

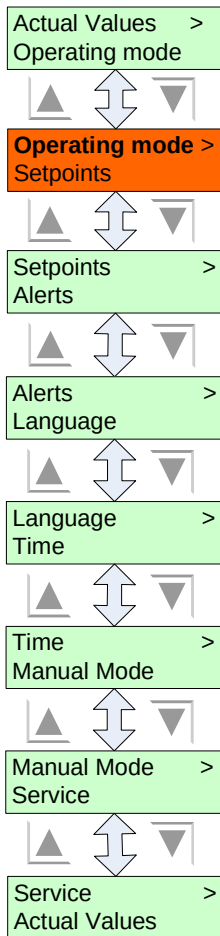

10.2.2 Operating mode

The heat exchanger settings are displayed here.

10.2.2.1 Regulation

The set control mode is displayed when the Operating mode - Regulation menu option is opened. There are 5 different control modes.

Auto Int.	1 or 2	(see chap. 10.3.4.1)
Auto Ext. Analog	1 or 2	(see chap. 10.3.4.2)
Auto Ext. Bus	1 or 2	(see chap. 10.3.4.3)
Slave Ext. Analog	via 0-10V	(see chap. 10.3.4.4)
Slave Ext. Bus	via GCM	(see chap. 10.3.4.5)
Manual mode		(see chap. 10.2.7)

Regulation	<
Setpoint Int 1	↑

10.2.2.2 Enabled externally

This shows whether or not the controller is enabled via connection **FG**.

Enabled externally	<
pass	↑

10.2.2.3 Number and type of fans

This displays the number of fans connected and their VT numbers.

10 x VT03010U	<
connected	↑

10.2.2.4 Max. fan speed

The set maximum speed appropriate to the design point of the heat exchanger appears. This speed is the same for all fans.

Max revolution	<
1100 (n/min)	↑

10.2.2.5 Heat exchanger

This indicates whether the heat exchanger is a condenser or a drycooler. The "dry" function is the default.

Condenser	<
dry	↑

10.2.2.6 Refrigerant

If a condenser has been selected as the heat exchanger, the selected refrigerant is displayed here. If no refrigerant has been selected, "bar" is displayed.


Refrigerant	<
R134a	↑

10.2.2.7 Hardware and software versions

This shows information about the current hardware and software versions of the GMM.

GMM: H001 S101	<
EC: H001 S101	↑

GMM	is the controller with the display and keyboard.
EC	is the fan management (PCB with fan connections).
H	is the hardware version.
S	is the software version.

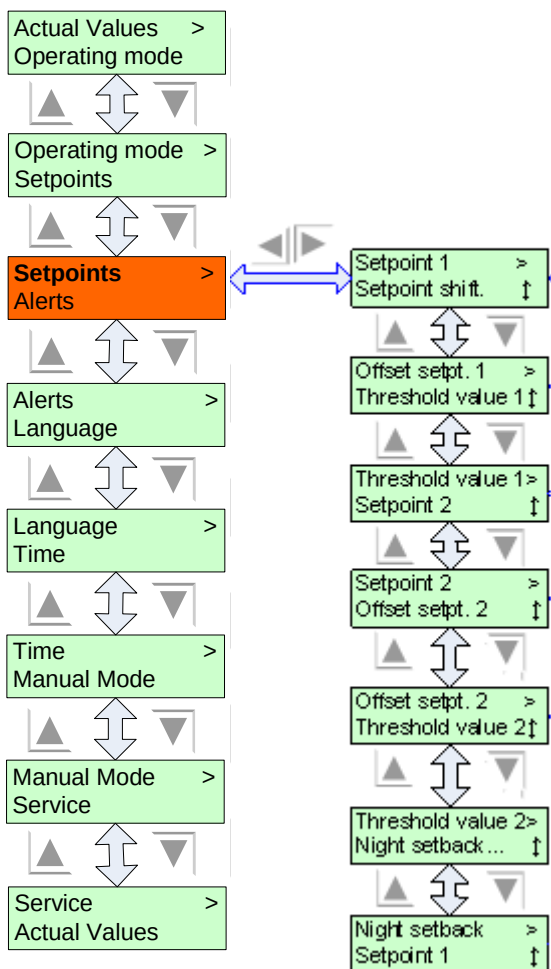

10.2.3 Setpoints

The setpoint is the value (pressure, temperature or voltage) used as the reference for the control.

10.2.3.1 Setpoint 1

The defined setpoint is displayed when the Setpoint 1 menu option is opened. What is displayed as the setpoint depends on the set actual value input (volt, temperature or pressure) and the operating mode (internal regulation or slave mode). As an example, the setpoint 1 is displayed as temperature.

Setpoint 1
nn.n °C

Setpoint 1
nn.n °C ...↑

Press the <J> key to enter EDIT mode.

Use the ◀▶ keys to select the write position. The position is displayed on the right of the second line. Use the ▲▼ keys to edit the value at the selected position. The minimum and maximum adjustment range is:

Pressure	1 bar to 50 bar
Temperature	0°C to 100°C
Volt	1V to 10V

The values are entered to one decimal place. Press the <J> key to accept the adjusted value.

10.2.3.2 Offset setpoint (in preparation)

The setpoint is displaced in this menu option. It is displaced via an input signal (temperature, pressure or voltage). The amplification of the shifting is set in the range -100% to +100%. At present the offset setpoint is set to 0%, i.e. no shifting.

Offset setpt. 1
0 %

10.2.3.3 Threshold


A value between 0 and 100% is set under this option. If the control value on the fans exceeds this value, the threshold relay trips. When the value falls below the threshold, the relay drops out again. If 100% is entered as the threshold, this function is deactivated.

The above also applies to setpoint 2, offset setpoint 2 and threshold 2.

10.2.3.4 Night setback


The night limited function is used to limit the control value for the fans to a maximum value and minimise noise emissions. Since this is used at night in residential areas, the function is called night setback. The limiter can be activated via digital input "D2" or via the built-in timer.

The maximum control value is set according to the diagram above, whereby again, as described above, EDIT mode is activated by pressing the ENTER key, the left and right arrows are used to select the write position and the up and down key are used to modify the value.




10.2.3.5 Night setback - turn-on time

The built-in timer allows the night setback to be activated and deactivated at specific times (see also 10.3.6.2 Night setback).



The time is set according to the diagram above, whereby again, as described above, EDIT mode is activated by pressing the ENTER key, the left and right arrows are used to select the write position and the up and down key are used to modify the value.


10.2.3.6 Night setback - turn-off time



If the same value is entered for both the turn-on and turn-off time (e.g. 00:00), the time-controlled night setback is deactivated.

10.2.3.7 Night setback - list of functions

Input D2	Night setback with time	Night setback
inactive	off	off
active	off	on
inactive	on	on
active	on	on

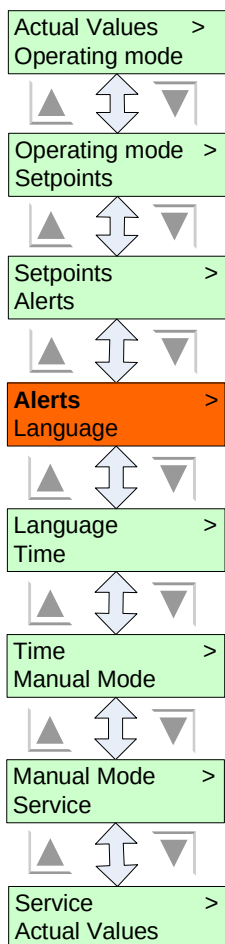


10.2.4 Alerts


The GMM has a built-in alarm memory where up to 37 priority 1 error messages are stored consecutively (ring memory). These error messages consist of the fault and the time stamp, comprising the date and time, at which the fault occurred.

History of error messages and warnings see **15. Table of error messages and warnings on the GMM display.**

When the alarm memory is selected, the display shows the last fault that occurred.

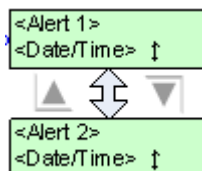



Use the ▼ key to display older faults.

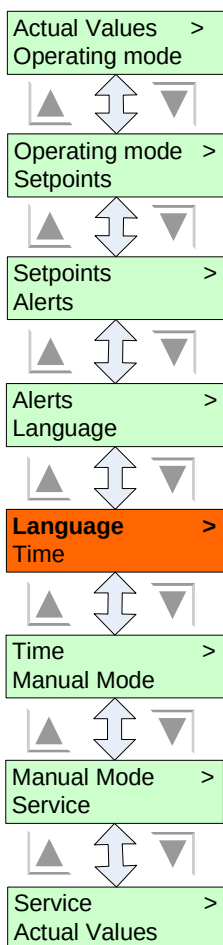

10.2.5 Language

4 languages can be selected in the Language selection menu. The selected language is marked with an asterisk.

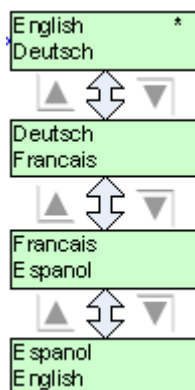

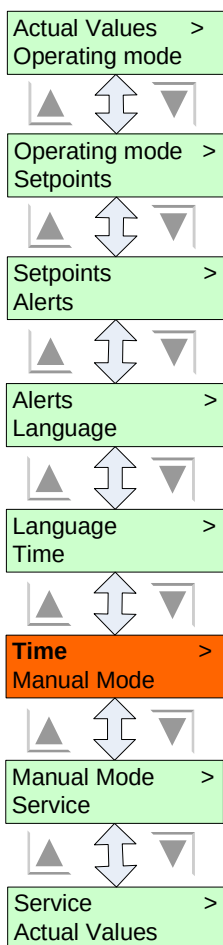

10.2.6 Time


The set time is displayed in the first line of the Time menu, using the 24-hour clock. The set date is displayed in the second line.


If you want to change the date and time, enter EDIT mode by pressing the <J> key.

The time appears first. Use the ▼ and ▲ keys to move between time and date. If you press the <J> key to enter EDIT mode while the date or time is displayed, you can use the ► and ◀ keys to select the position you want to edit. The second line shows the position currently selected. Press the <J> key to exit EDIT mode.

The time is then set when you exit the Set time function using the ◀ key. Pressing the X key aborts the programming of the time and the time is not changed.


The time and date are used to enter the alarm times in the alarm memory and for all timer functions (night setback etc.).

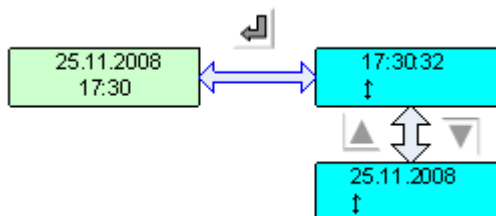

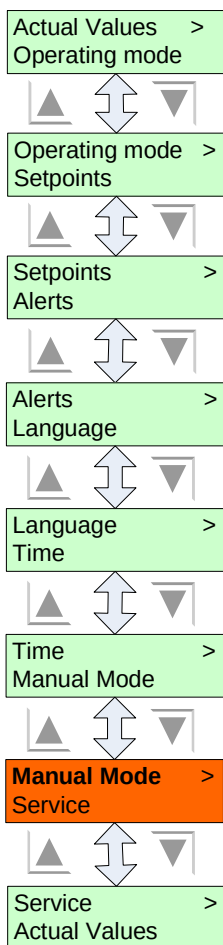


10.2.7 Manual mode

The Manual mode menu option shows whether manual mode is activated or deactivated. When it is activated, the control value can be modified. The * indicates whether manual mode ON or OFF is active.

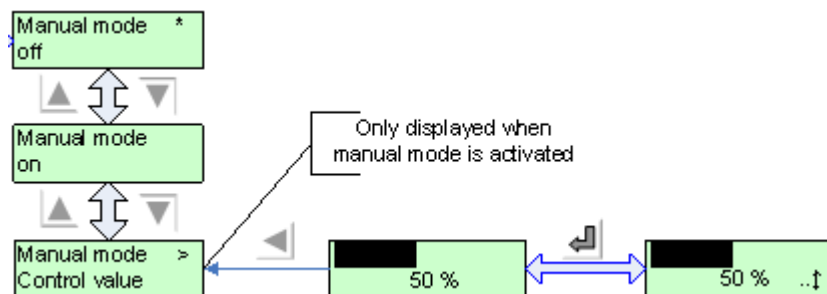


Manual mode always overrides all other control modes.

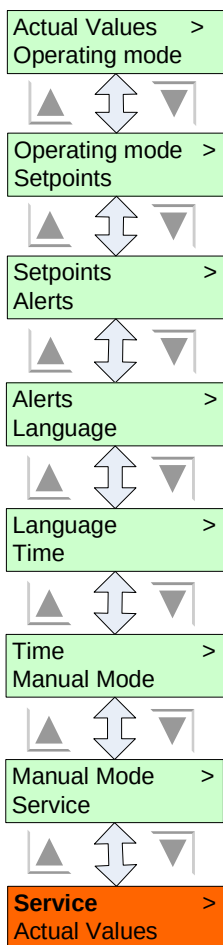


10.3. Service

The Service menu is only accessible with a password which you are prompted for first. The password is **3795**.


Once the password has been accepted, the Service menu appears.

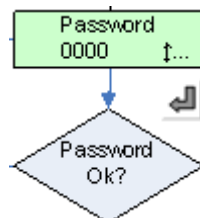

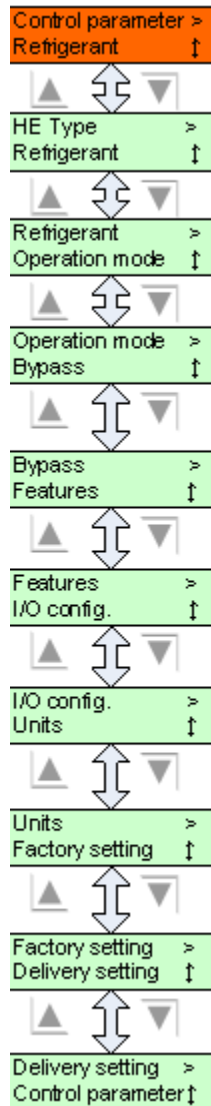

10.3.1 Control parameters

The control parameters Kp-Faktor, reset time Ti and rate time Td are set in this menu option. The procedure is as shown below.

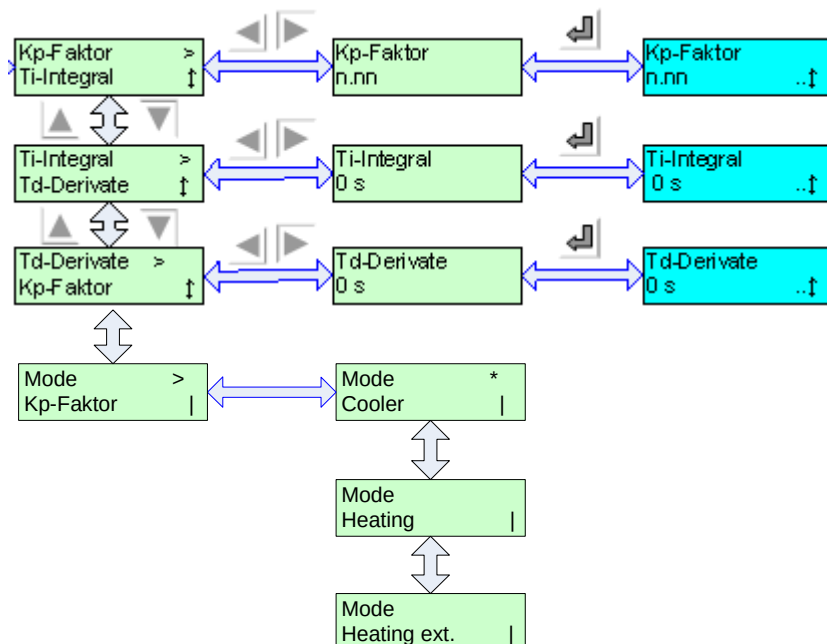

Select, display and, if necessary, modify control parameters.

The Kp-Faktor can be entered in a range from 0.1 to 100.0 to one decimal place. The Kp-Faktor specifies the control amplification. It is the proportion of the control path following the input signal.

The reset time Ti can be set in a range from 0 to 1000 seconds. The I part of the control achieves a time reconciliation with the setpoint. The reset time, for example $T_i = 2s$, means that at time $t=0$ the output value after 2s has reached the value of the constant input value.

The rate time Td can be set in a range from 0 to 1000 seconds. The D part of the control reacts not to the control deviation but to the speed of change.

Normally the GMM is used to cool liquids and cooling agents. With some applications a reversal of the function is required, i.e. liquids are warmed. With the regulator parameter setting "Mode" the control characteristics can be set to heating.

This function can generally be performed once (heating), or it can even be switched over via the DI3 input (heating ext.).

10.3.2 Heat exchanger

The heat exchanger type is selected here. The options are drycooler and condenser in the dry version (no spray). The selected type is displayed with a *.

Control parameter >	Refrigerant ↑
HE Type >	Refrigerant ↑
Refrigerant >	Operation mode ↑
Operation mode >	Bypass ↑
Bypass >	Features ↑
Features >	I/O config. ↑
I/O config. >	Units ↑
Units >	Factory setting ↑
Factory setting >	Delivery setting ↑
Delivery setting >	Control parameter ↑



Condenser *	dry ↑
Cooler	dry ↑


Press Enter to select

10.3.3 Refrigerant

In this menu option you can select whether a refrigerant has been defined and whether the display of setpoints and actual values with temperature should be converted accordingly, or whether no refrigerant has been defined (bar) and the setpoints and actual values should be displayed as pressure.


The selected option is displayed with a *.

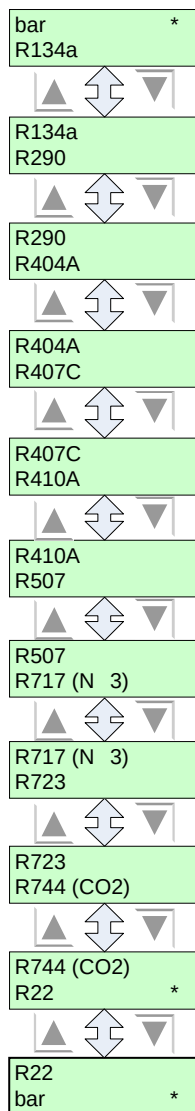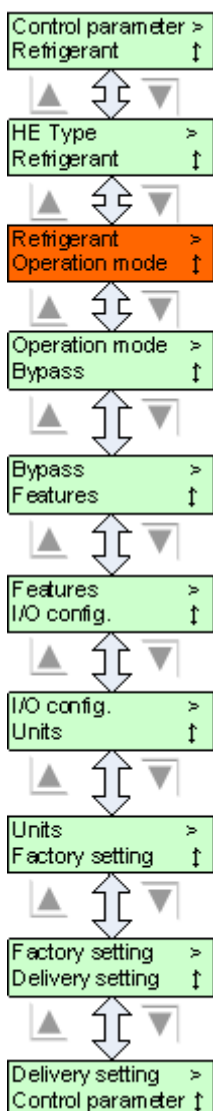

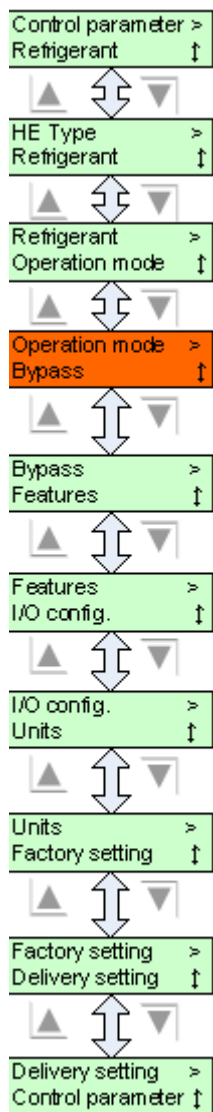

10.3.4 Operation mode

The active operation mode is marked with a *.

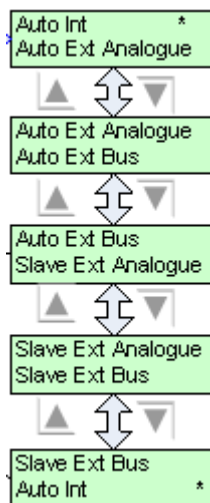

10.3.4.1 Auto internal

In this mode, control is automatic on the setpoint set internally. This setpoint is entered in the **10.2.3 Setpoints** menu option.

10.3.4.2 Auto external analogue

In this mode, control is automatic on the setpoint defined externally by the analogue input. Which input delivers the setpoint and which the actual value is set in the **10.3.7 I/O configuration**.

10.3.4.3 Auto external bus

This mode has not yet been implemented.

10.3.4.4 Slave external analogue

In this mode, there is no internal control. Instead the control value on the slave input is scaled and forwarded directly to the fans. Which input is to be used as the slave input is defined in **10.3.7 I/O configuration**.

10.3.4.5 Slave external bus



This mode is in preparation.


10.3.5 Bypass

The bypass function can be activated or deactivated in this service option. If the function has been activated, the control value for bypass mode can be set.

The bypass function causes the fans to run at a speed set here in the event of a fault in the regulation. This bypass function is activated on the motors 10 seconds after failure of the regulation.


The bypass mode currently set is marked with an asterisk. The operation mode is selected with the <J> key. Display the control value by using the ► key. The value is changed as described in the **10.2 Operating menu**.

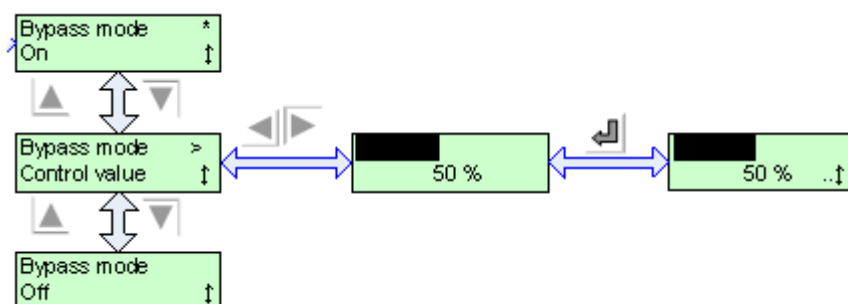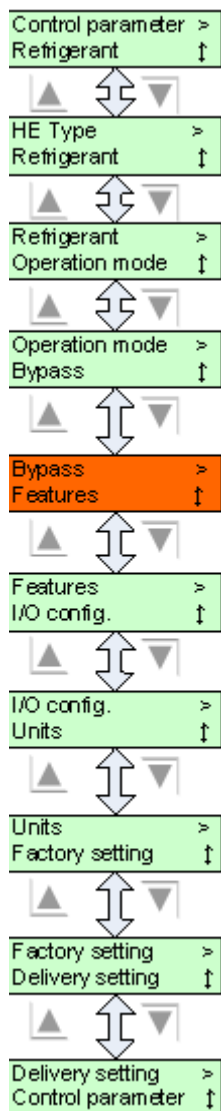

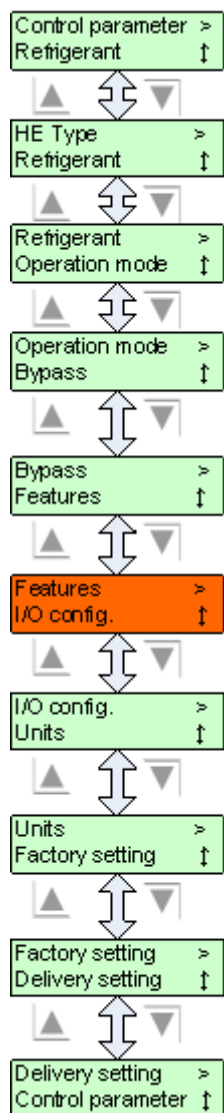

10.3.6 Features


The control functions, such as number of setpoints, the night setback or offset setpoint are selected in this service menu option.

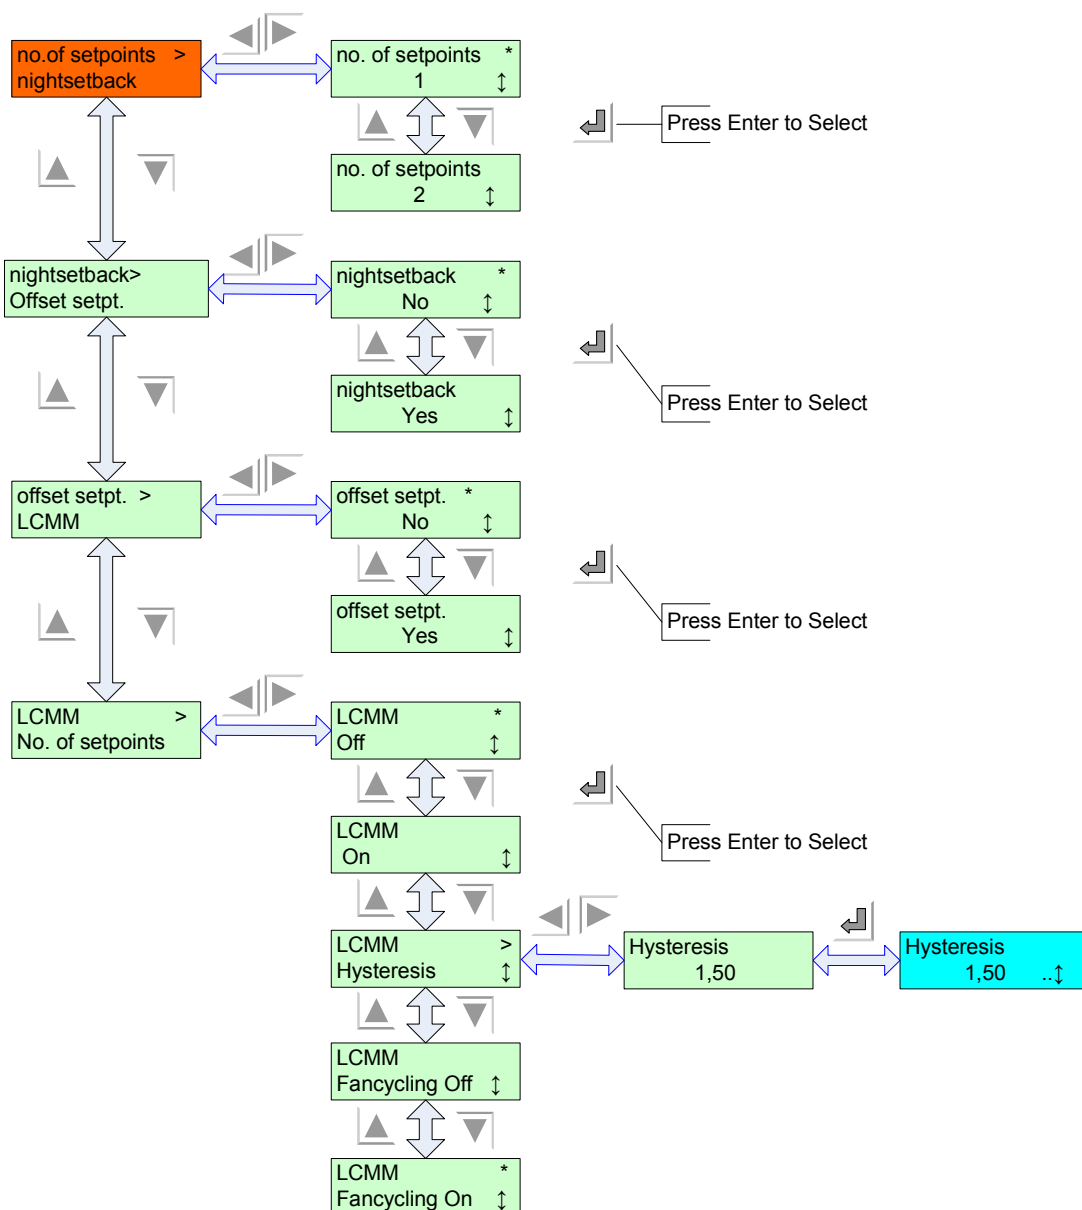

10.3.6.1 Number of setpoints


The number of setpoints is set here. The minimum number is 1 setpoint on which regulation is performed. If 2 setpoints are selected, switchover is via digital input **D3**. If the input is open, setpoint 1 is used for regulation. If input **D3** is connected to **GND**, setpoint 2 is used for regulation.

If different setpoints are used for control in summer and winter, the switchover can be effected via a digital input if the number of setpoints is set to 2.

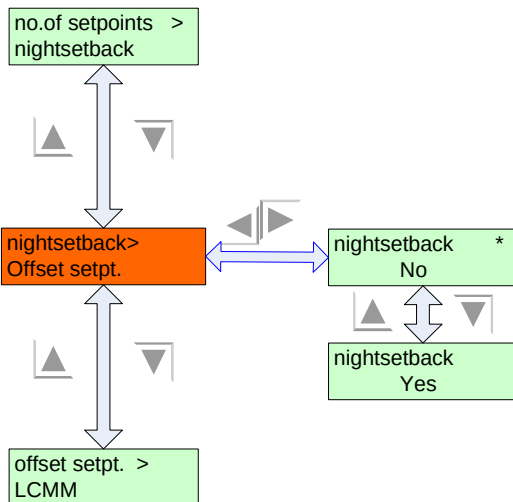

10.3.6.2 Night setback


A night setback is generally activated or deactivated in this service option. The value of the night setback is set in the Setpoints menu option (**10.2.3.4 Night setback**). The night setback, i.e. turn-on and turn-off time and the control value, can also be programmed there in the normal operating menu. The night setback is activated both via digital input **D2** and via the turn-on and turn-off time. Both activations can take place in parallel. If the turn-on and turn-off times are the same, activation is only via the digital input **D2**.

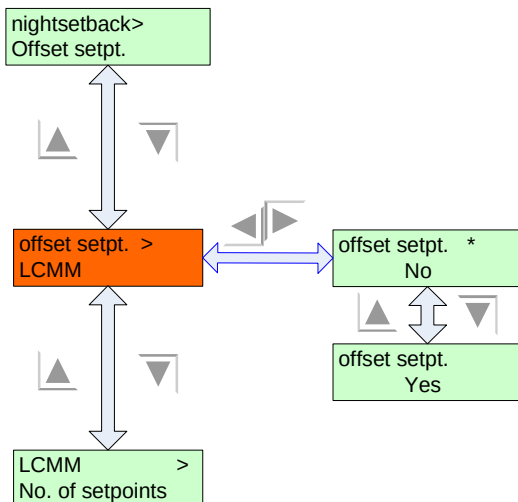

10.3.6.3 Offset setpoint

A setpoint adjustment (offset setpoint) can be activated here. This offset setpoint is used to adjust the setpoint, and hence the operating point, of a cooling system dynamically, either independently of the external temperature or a control value from a master control.

The maximum value of the offset is set in the Setpoints menu option (**10.2.3 Setpoints**).

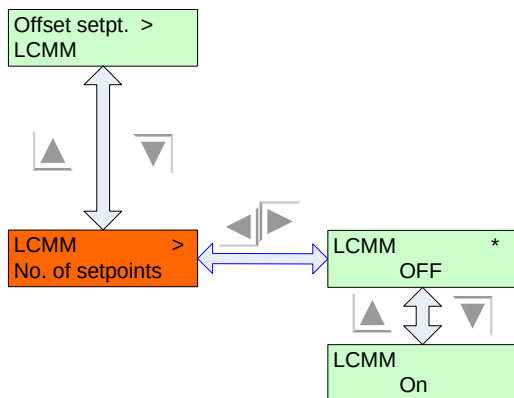

10.3.6.4 Low Capacity Motor Management

EC fans have a minimum speed which is in the range of about 9%-15% of the maximum speed. With a single fan installed the smallest possible control value depends on its minimum speed. With several fans installed the LCMM feature enables a control value which is lower than the minimum speed of a fan. The minimum control value is calculated as follows: $\text{Control Value} = \text{Minimum fan speed [\%]} / \text{number of fans}$. This control value is reached by switching fans on and off as needed. The running fans will be speed controlled by the GMM as usual. When control values above the minimum speed are needed then all fans will run as usual. The advantage of LCMM is a continuous control of the heat exchanger performance even in the low capacity region instead of a 2 point control (on/off).

The figure below shows an example with 4 fans. At an assumed minimum speed of 10% of the maximum speed the heat exchanger can operate at a control value of 2.5% (10% minimum fan speed / 4 fans). At this particular setting a single fan operates at minimum speed whereas all other fans are switched off. If the control value increases the operating fan will increase the speed. As soon as a control value of 5% is reached the second fan will be switched on. Both fans will now run at minimum speed. At 7.5% control value the third fan is switched on and at 10% all are operating. The figure below illustrates this behaviour. Without LCMM the smallest possible heat exchanger capacity is 10% even though the control value might be lower.


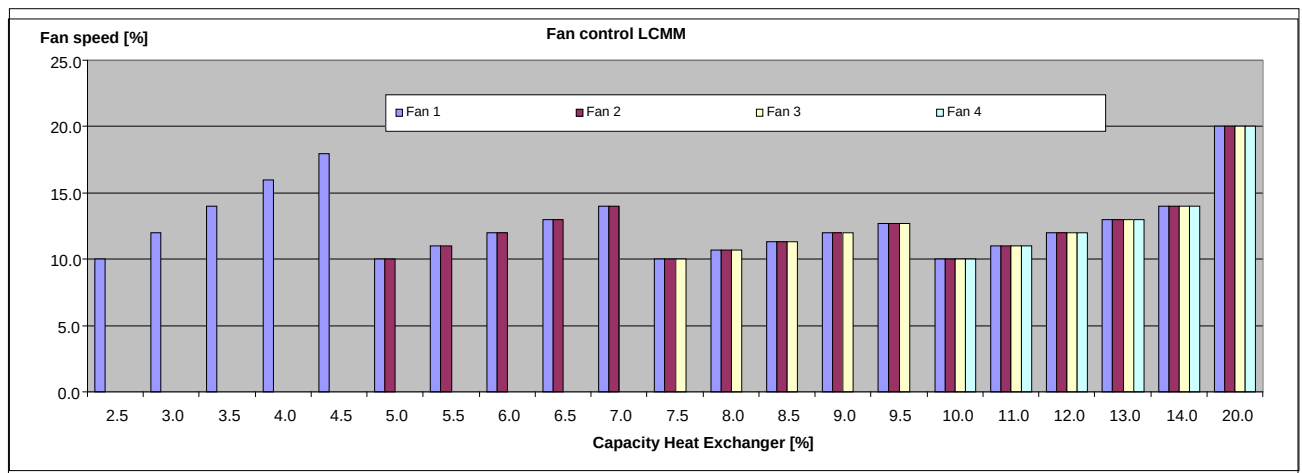


Fig. 10.3.6.1: LCMM Fan Control

10.3.6.4.1 LCMM Hysteresis

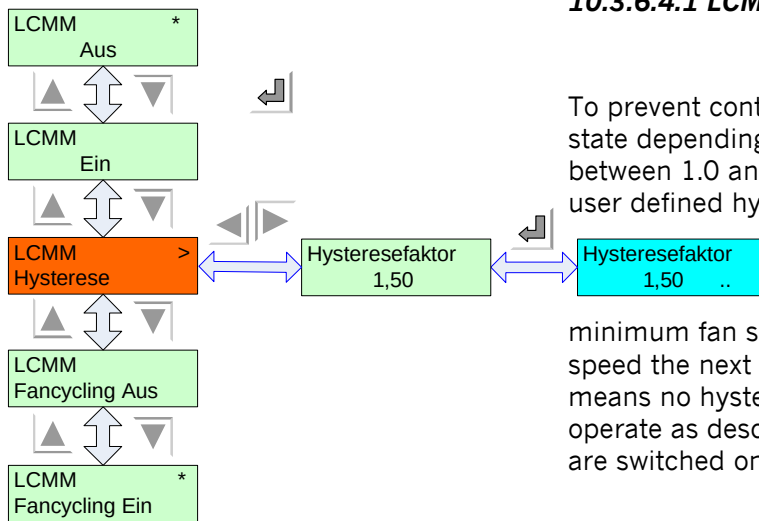

To prevent continuous switching between on and off state depending on the control value a hysteresis factor between 1.0 and 2.5 can be defined. The GMM uses the user defined hysteresis factor and multiplies it with the

minimum fan speed. When the first fan(s) reach this speed the next fan(s) are switched on. A setting of 1.0 means no hysteresis. Within the Hysteresis curve the fans operate as described above. Only the points where fans are switched on or off have changed.

In the example below the minimum speed of the fans is 10% of the maximum value. The Hysteresis factor is 1.5. This means that the threshold to turn on the next fan is set to 15%. In our example with 4 fans this relates to a heat exchanger capacity of 3.75% to switch on the first fan. The fan is switched off again when the Heat Exchanger capacity drops below 2.5%. The second fan is turned on when a heat exchanger capacity of 7.5% is needed. $(15\% / 4 * 2)$ – The third fan at a capacity of 11.25% and the fourth at a capacity of 15%.


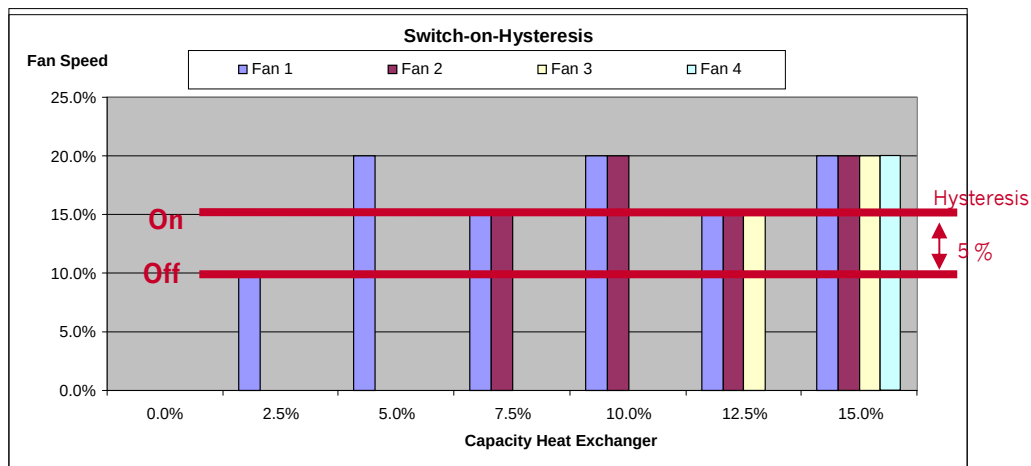


Fig. 10.3.6.4.2: LCMM Hysteresis

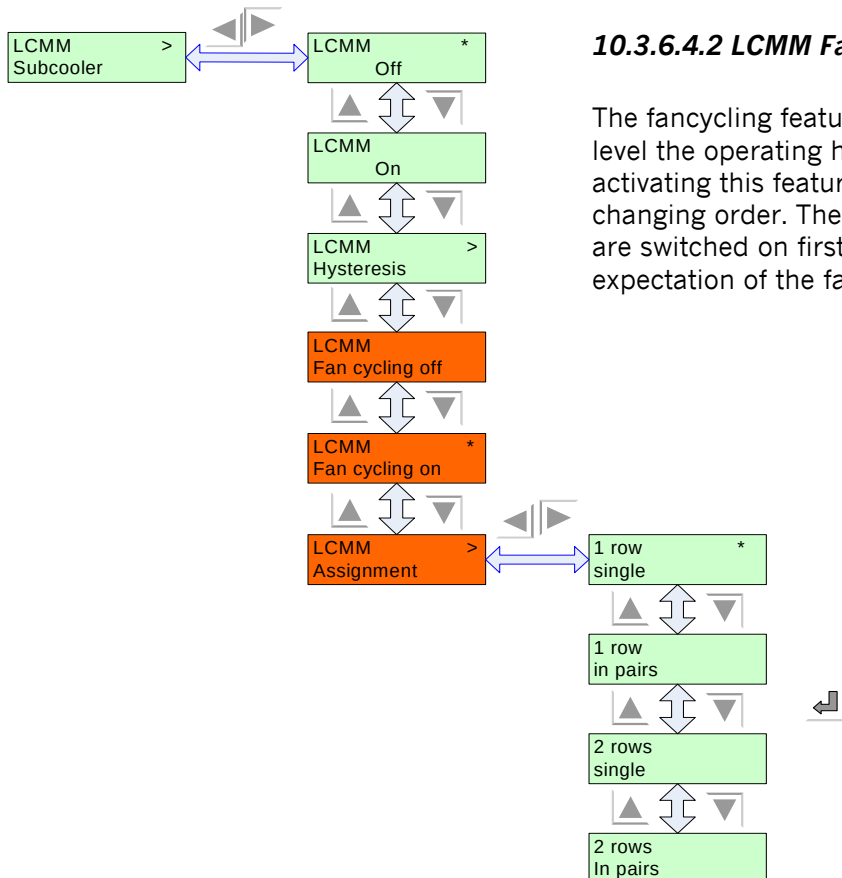


10.3.6.4.2 LCMM Fancycling


The fancycling feature of LCMM gives the opportunity to level the operating hours of the individual fans. When activating this feature the fans will be switched on in a changing order. The fans with the least operating hours are switched on first thus increasing the lifetime expectation of the fans.

10.3.6.4.3 LCMM fan cycling assignment

The assignment of how the fan cycling is to run can be performed in 4 different ways. The single row assignment for heat exchangers of up to 8 fans is in 1 row. The two row assignment applies for heat exchangers with up to 16 fans in 2 rows.

- 1 row single (1- 2 - 3- 4- 5- 6- 7- 8)
- 1 row in pairs (1+2, 3+4, 5+6, 7+8)
- 2 rows single beside one another (e.g. with fan unit 8: 1-5-2-6-3-7-4-8)
- 2 rows in pairs (e.g. with fan unit 8: 1+5, 2+6, 3+7, 4+8)

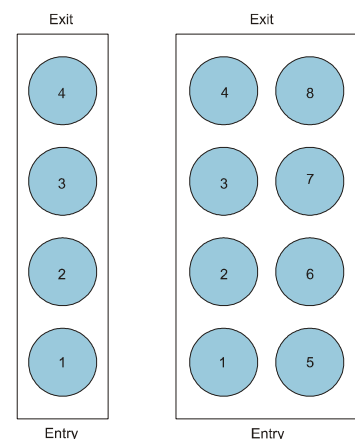

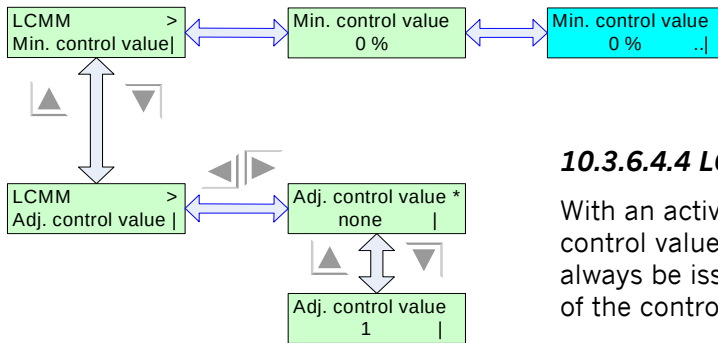

10.3.6.4.4 LCMM min control value

With an active LCMM function and unit release the control value programmed with min. control value should always be issued to the fans, even when the control value of the control element should be lower.

As soon as the control value of the controller is greater than the min. control value, this is then issued.

The min. control value adjusting range is 0-100%.

10.3.6.4.5 LCMM control value adjustment

The control value adjustment means that with the "Slave external" operating mode the pre-set control value 1:1 is not issued, but it can be adjusted to a maximum of 4 levels.

This makes it possible to make a "Signal adjustment" over the 0-100% range, whereby the values 0% and 100% are not adjusted.

The adjustment is shown in the diagram below. The X axis gives the external pre-set control value in % and the control value for the fans can be read in % on the Y axis.


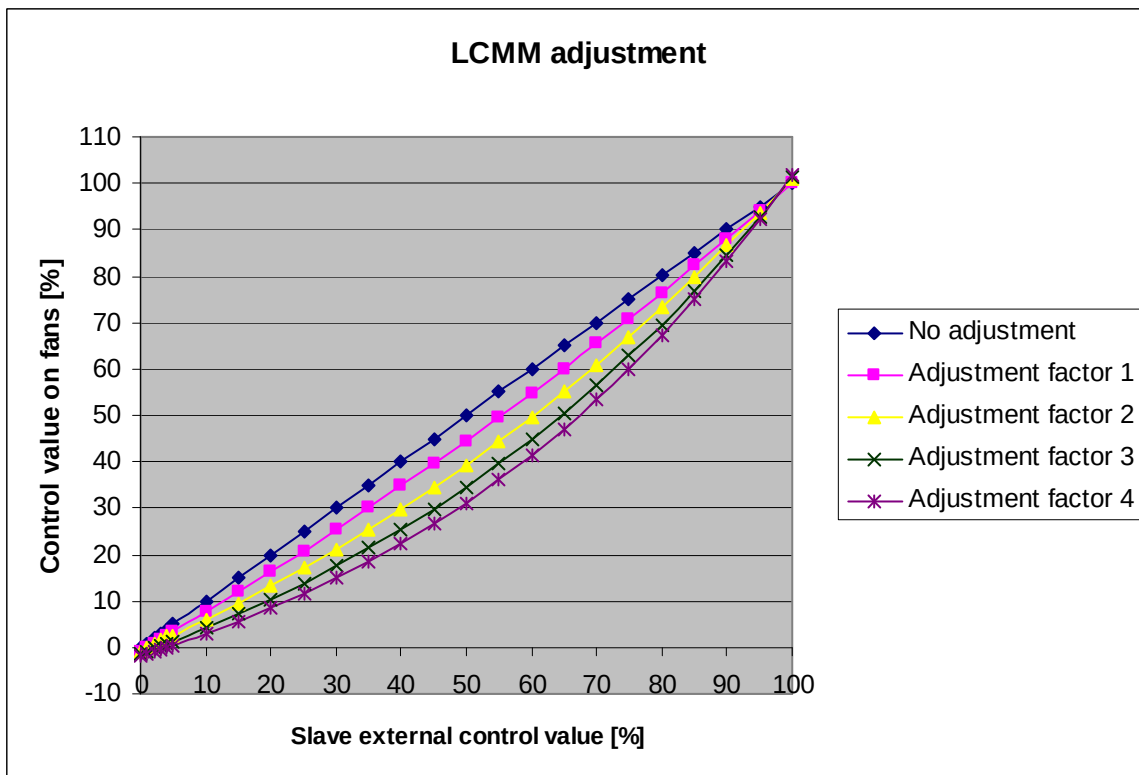


Fig. 10.3.6.4.5 LCMM adjustment

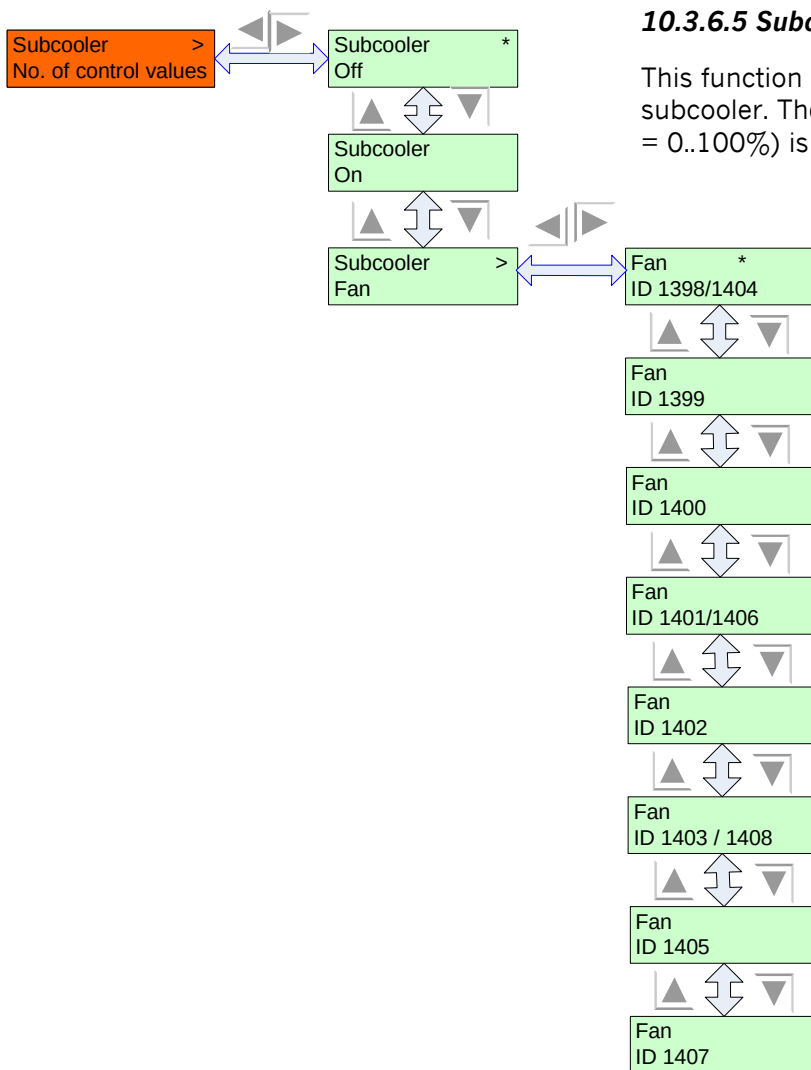


10.3.6.5 Subcooler function

This function allows a separate EC fan to be operated as subcooler. The control value for the subcooler fan (0..10V = 0..100%) is given via the “AO2” output to the fan.

This subcooler runs constantly, independent of the regulation of the control unit with the set speed. It is activated like the regulated fans via the release.

The subcooler function can be switched on and off in the functions menu.


The fan type used is selected in the selection menu.

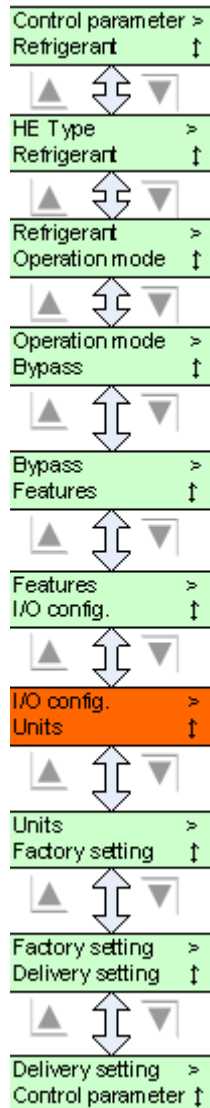


10.3.7 I/O configuration

This menu option is used to configure the analogue and digital inputs and outputs. Selected functions can be assigned to the inputs and outputs.


This is done at 3 menu levels. The input or output groups are selected at the first level.

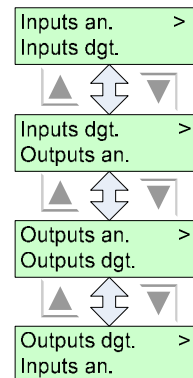

The individual inputs or outputs in a group are selected at the second level. Here are the analogue inputs as an example.

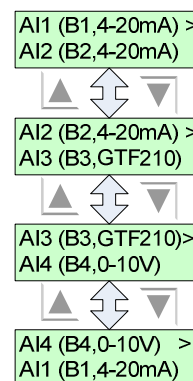

A function can be assigned to the individual inputs and outputs at the third level.

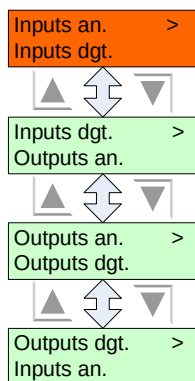


10.3.7.1 Inputs analogue

-Level 1-

The analogue inputs are measurement inputs for recording temperature or pressure values. These inputs can also be used to prescribe control values (slave mode).

Terminals **B1** and **B2** are two current inputs (4-20 mA). Terminal **B3** has an input for the GTF210 temperature sensor. There is an input for 0-10 V DC on terminal **B4**.

-Level 2-

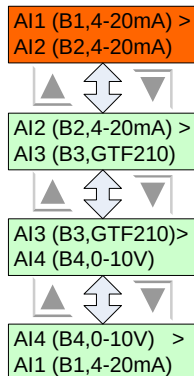

10.3.7.2 Current inputs

-Level 3-

Actual value means that the current measurement signal exists on this input. With pressure sensor **GSW4003** this is the current corresponding to the pressure. Make sure that "Auto Int" mode has been selected in the **10.3.4 Operation mode** menu. There is a special situation if both current inputs are configured as actual value. The current input delivering the greatest measurement signal is then selected (**MAX selection**).

A **current value** of **0-25 bar** or of **0-40 bar** can be selected with the power input.

Ctrl. val slave means that the control signal for the fans follows this input. With current input this means that 4 mA generates a control signal of 0% and hence the fans are stationary. A 20 mA input current would generate a control signal of 100% on the fans. Make sure that "Slave Ext" mode has been selected in the **10.3.4 Operation mode** menu.

Setpoint 1 means that setpoint 1 on which internal control is performed is specified via the current input. The current input is scaled to the set actual value (see **15. Table of error messages and warnings on the GMM display**). The origin of the actual value has then still to be configured. Make sure that "Auto Ext" mode has been selected in the **10.3.4 Operation mode** menu.

Setpoint 2 (see **Setpoint 1**)

No function is selected if this input should be inactive.

The same applies to current input 2 as to current input 1.

10.3.7.3 Temperature sensor input

Act val temp means that a **GTF210** temperature sensor is connected to this input. Make sure that "Auto Int" mode has been selected in the **10.3.4 Operation mode** menu.

No function is selected if this input should be inactive.


10.3.7.4 Input 0..10V

Actual value means that the actual value (0-10V) for regulation exists on this input. Make sure that "Auto Int" mode has been selected in the **10.3.4 Operation mode** menu.

Ctrl. val slave means that the control signal for the fans follows this input. The characteristic curve is linear from 0-100%. Make sure that "Slave Ext" mode has been selected in the **10.3.4 Operation mode** menu.


Setpoint 1 means that setpoint 1 on which internal control is performed is specified via the voltage input. The voltage input is scaled to the set actual value (0-10V on 4-20 mA - **16mA = 10V / 0V = 4mA**- or on 0-100°C -Factor 10-). The origin of the actual value has then still to be configured. Make sure that "Auto Ext" mode has been selected in the **10.3.4 Operation mode** menu.

Setpoint 2 (see **Setpoint 1**)

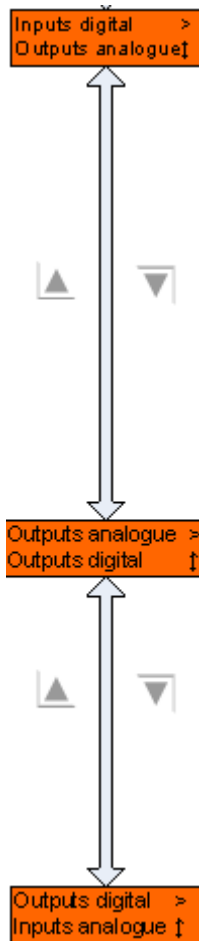

10.3.7.5 Inputs digital

The digital inputs on terminals **D1**, **D2** and **D3** are control inputs. Their function is permanently assigned according to the diagram below.

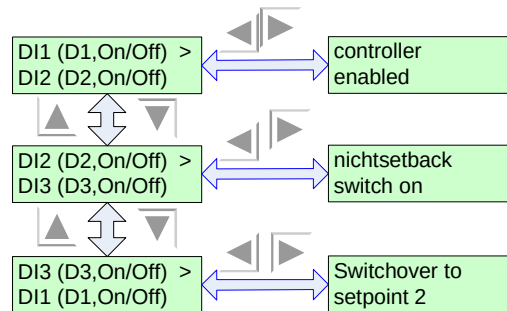


The inputs are active when they are connected to **GND**. From Version **.1**, the terminals are active when they are connected to **+24V**. They can only be switched with potential-free contacts (relay contact).

10.3.7.6 Outputs analogue


The analogue outputs can output a voltage of 0-10 V DC. A fixed function is assigned to analogue output 1 and 2.


Output 1 outputs the control signal from 0-100% scaled as a 0-10V signal. Output 2 outputs the control signal for the cooler when the functions is selected.

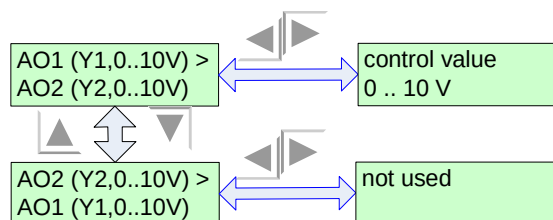

10.3.7.7 Outputs digital


The digital outputs are relay contacts. Each output has a 250 V / 1 A two-way contact. The alarm output PRIO 1 is switched as a **failsafe** contact i.e. the contact is closed when there is no current. Fixed functions are assigned to the digital outputs. See **15. Table of error messages and warnings on the GMM** display.

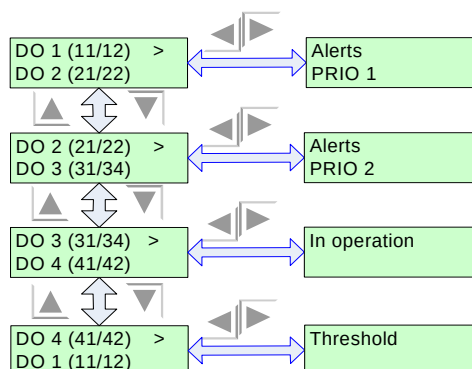

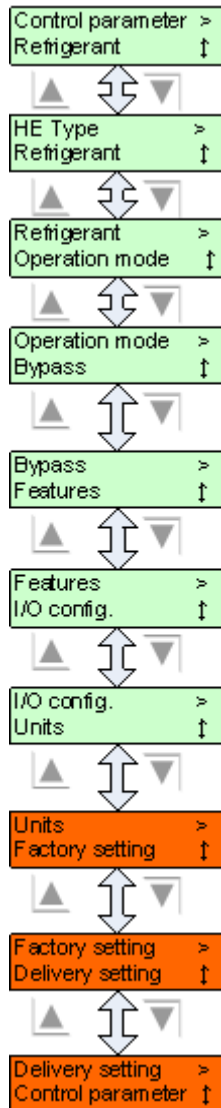

10.3.8 Sel. unit IP/SI


The units to be used for temperature and pressure are selected here. SI are the international units (**S**ystème **i**nternational d'**u**nités). IP are the Anglo-American measurement units (imperial system).

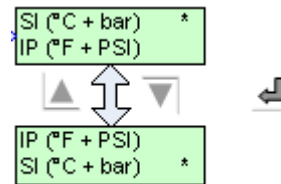

The selected unit of measurement is marked with a *.


10.3.9 Factory settings

The regulation can be reset to factory settings here. **CAUTION:** Any changes made locally will be deleted. Factory commissioning values will be retained. The bypass and control functions are reset to their defaults.

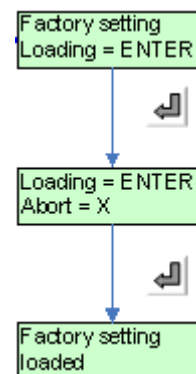

10.3.10 Delivery setting

The regulation can be reset to delivery setting here. **CAUTION:** Any changes made locally and commissioning values will be deleted. Once this function has been completed, a completely new factory commissioning must be carried out.

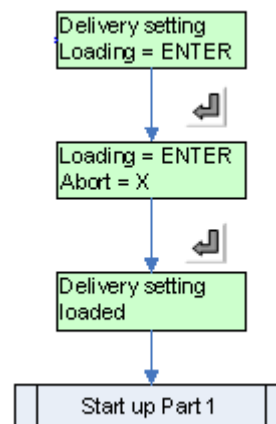

11. Errors and troubleshooting

11.1 General notes

Most faults that occur during commissioning are due to wiring faults or defective sensors. It is only in the rarest of cases that the speed controller itself is defective. Check the following points before ordering a replacement:

Operating mode info menu:

- Is a fault displayed in the info menu? (You can always return to the Info menu by pressing the **X** key).
- If **NO**, go to **Test point 2**.
- If the **Hardware error** message is displayed, there is a fault in the EC controller (lower PCB with fan connections). Then please check the fan connections on the EC controller. Are the 24V DC supply cables connected to the fans properly? Are the bus connections **A** and **B** connected properly and with the correct polarity.
- If the "**Fx temperature**" message appears, one or more of the fans has a temperature fault. **Fx** represents the fan number. If more than one fan is affected, they are listed in succession. A temperature fault exists if the motor winding or motor end stage is too hot.
- If the "**Fx mains failure**" message appears, one or more of the fans has a phase failure (only on 3-phase fans). For single-phase fans, the message "**Fx general error**" appears. **Fx** represents the fan number. If more than one fan is affected, they are listed in succession.
- If the message "**No sensor selected**" appears, no sensor input has been selected in the **10.3.7 I/O configuration**.

Test point 2:

Mains connection:

- Are all phases present? (The message "**Fx general error**" appears if there is a missing phase on one or more fans. **Fx** represents the fan number. If more than one fan is affected, they are listed in succession.

Sensor connection:

- Is the sensor connected correctly? Cf section **7**.
- Sensor OK? (Measure! Pressure: 4-20mA, Temp.: 1.2-2.7k Ω , Standard signal: 0-10V)
- Are the sensor cables laid in the immediate vicinity of the mains or motor cable? Consider increasing the distance!
- Are the sensor cables shielded? If not: swap for shielded cables!
- Is the shielding applied unidirectionally on the controller?

Fuses:

- Is the fuse on the controller supply OK?

12. Technical data

12.1 GMM EC/01 /04 /08 dimensions

The dimensions of the housing and fixing are shown below. All dimensions are given in millimetres.

Fixing drill holes max. $\varnothing$ 7.5 mm.

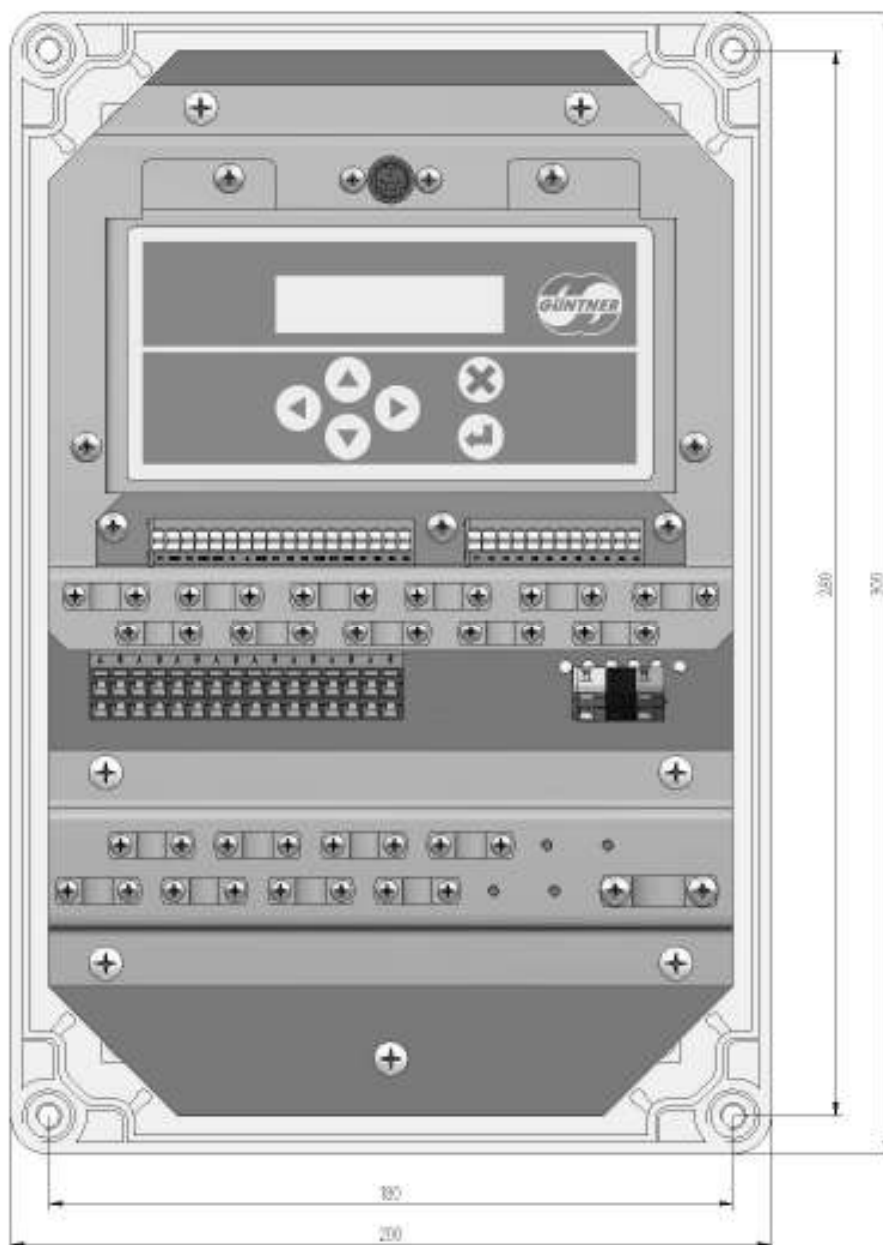


Fig. 12.1: GMM EC/01 /04 /08 housing dimensions

12.2 GMM EC/16 dimensions

The dimensions of the housing and fixing are shown below. All dimensions are given in millimetres.
Fixing drill holes max. $\varnothing$ 7.5 mm.

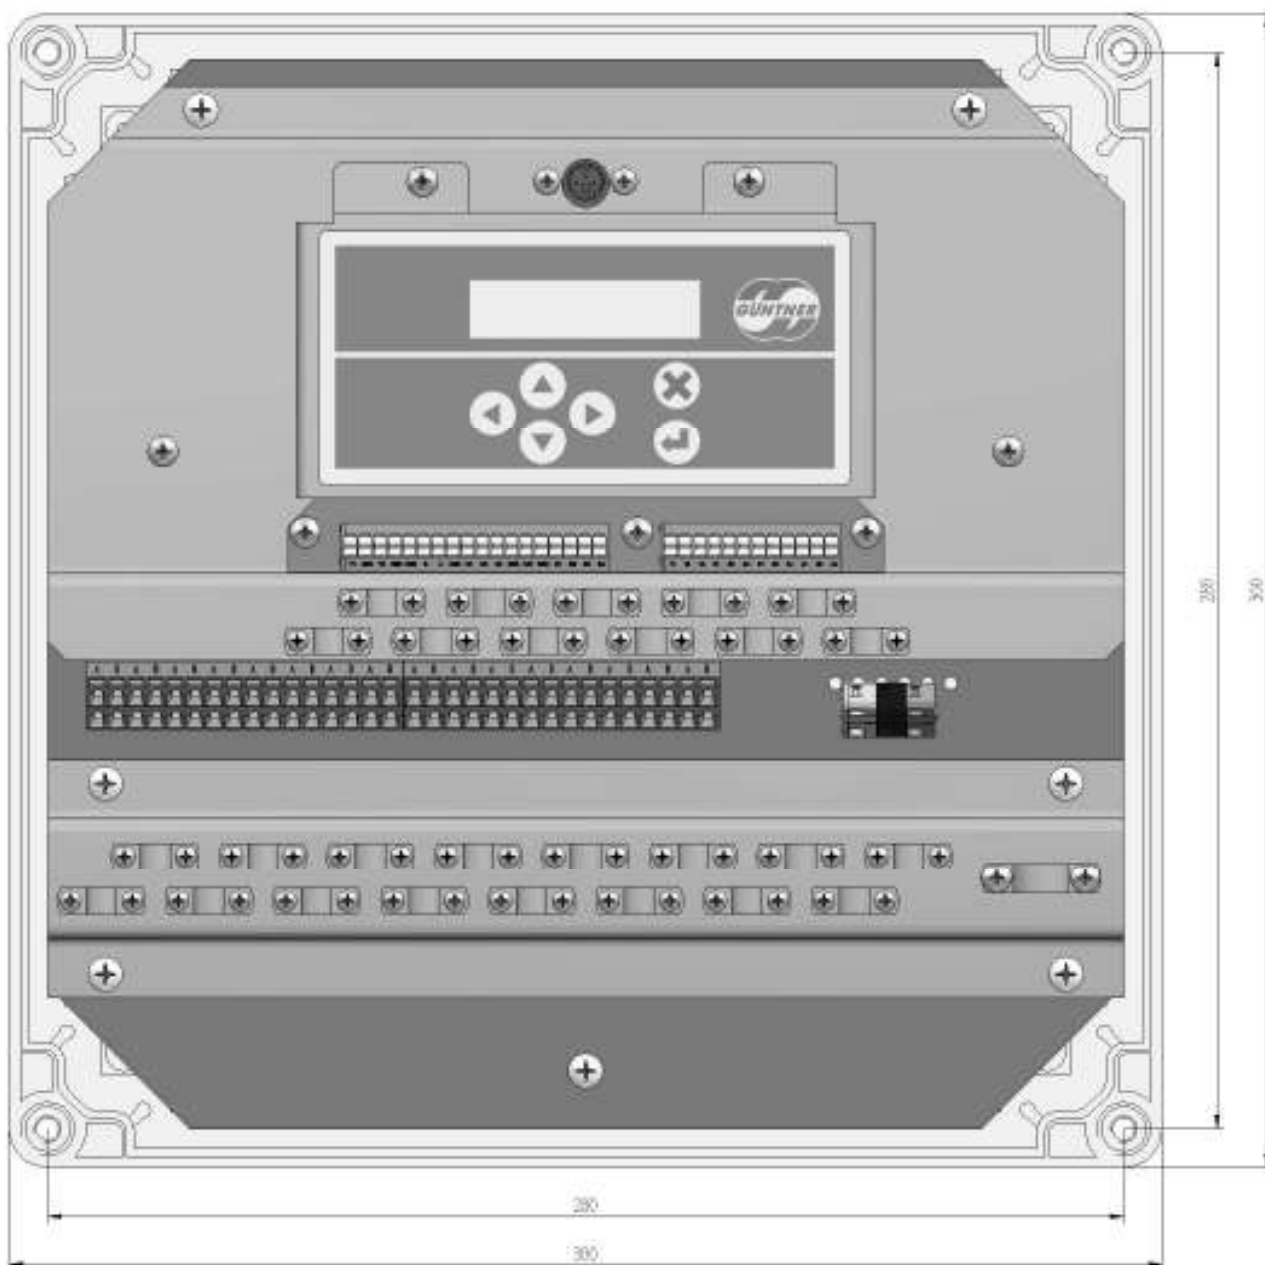


Fig. 12.2 GMM EC/16 housing dimensions

12.3 GMM EC/01 /04 /08 UL dimensions

The dimensions of the housing and fixing for the UL version are shown below. All dimensions are given in millimetres.

Fixing drill holes max. Ø 5mm.



Fig. 12.3: GMM EC/01 /04 /08 UL housing dimensions

12.4 GMM EC/16 UL dimensions

The dimensions of the housing and fixing for the UL version are shown below. All dimensions are given in millimetres.

Fixing drill holes max. $\varnothing$ 5mm.

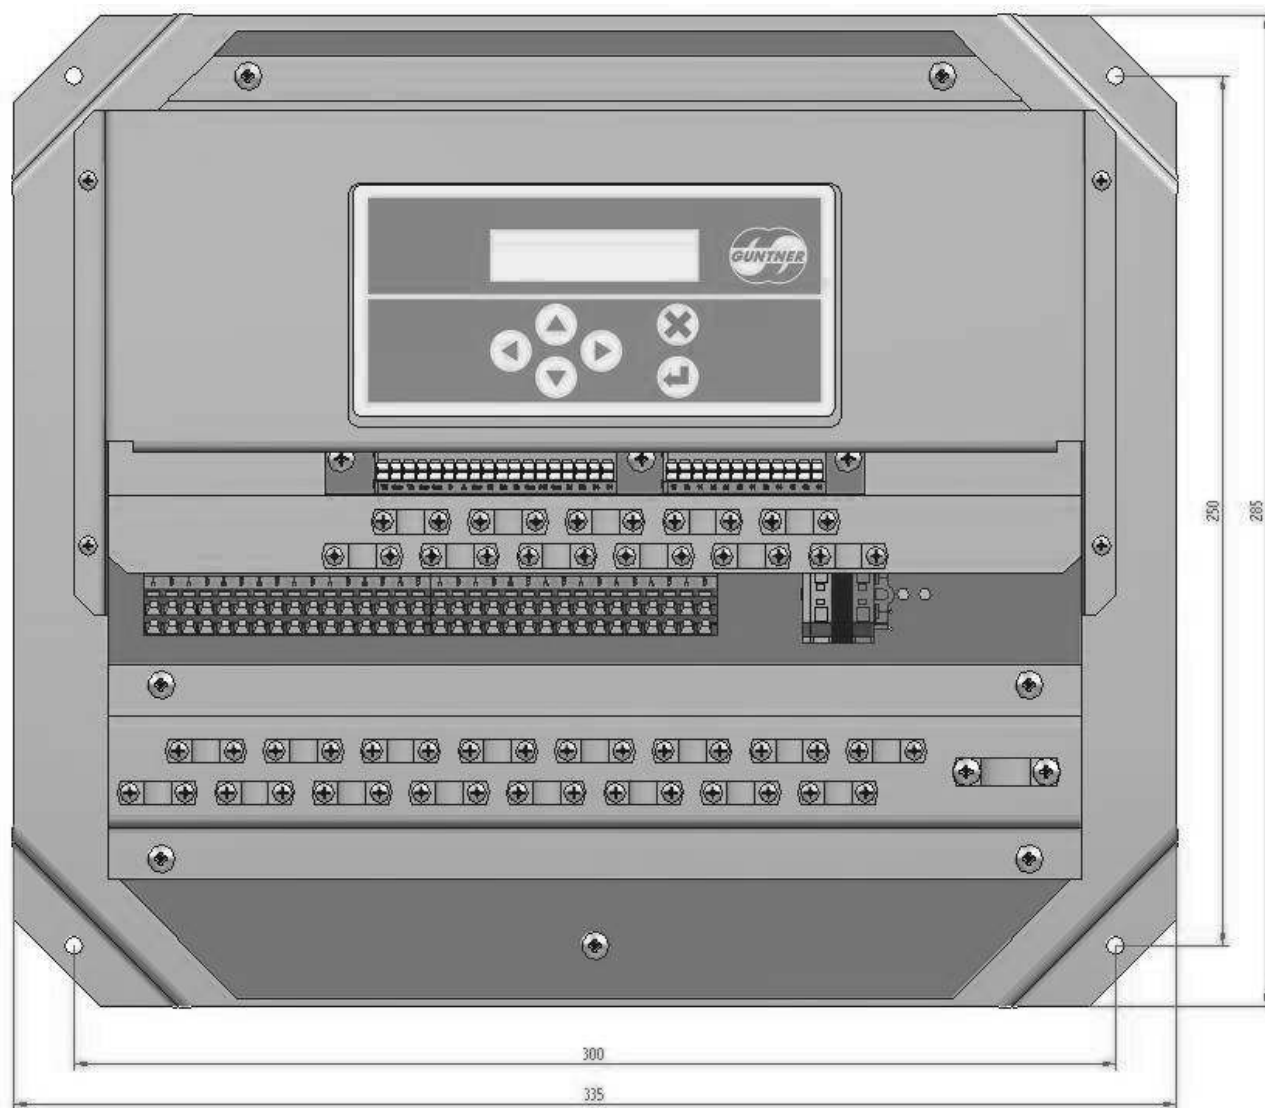


Fig. 12.4: GMM EC/16 UL housing dimensions

13. Electrical and mechanical properties

Mains voltage:	100 - 240V +/- 10% 50-60Hz	
Grounding connection:	min. 1,5 mm ²	
Current consumption:	GMM EC/01	0.3A
	GMM EC/04 /08 /16	0.4A
Heat loss:	GMM EC/01	approx. 14W
	GMM EC/04	approx. 18W
	GMM EC/08	approx. 20W
	GMM EC/16	approx. 30W
Sensor connection:	Pressure transmitter 4-20 mA or temperature sensor GTF210 (-30°C - +70°C) or standard signal 0-10V	
Ambient temperature:	-20 - +40°C	
Storage temperature:	0 - +50°C dry	
Weights:	GMM EC/01 = 2.6 kg	
	GMM EC/04 = 2.8 kg	
	GMM EC/08 = 2.8 kg	
	GMM EC/16 = 3.9 kg	
	GMM EC/01 UL = 2.7 kg	
	GMM EC/04 UL = 2.9 kg	
	GMM EC/08 UL = 2.9 kg	
	GMM EC/16 UL = 4.0 kg	
Protection rating:	IP 54	
Dimensions:	GMM EC/01 /04 /08	see 12.1 GMM EC/01 /04 /08 dimensions
	GMM EC/16	see 12.2 GMM EC/16 dimensions
	GMM EC/01/04 /08 UL	see 12.3 GMM EC/01 /04 /08 UL dimensions
	GMM EC/16 UL	see 12.4 GMM EC/16 UL dimensions

List of diagrams

		Page
1.1	LOCATION OF CONNECTIONS ON THE GMM EC/08	6
4.1.1	MAINS CONNECTION GMM	12
4.2.1	GMM FAN CONNECTIONS	13
5.4.1	SIGNALLING OUTPUTS	14
6.1.1	CONNECTION FOR ENABLING CONTACT	16
6.2.1	CONNECTION FOR THE SPEED LIMITER	17
6.3.1	SWITCHOVER OF CONTROL PARAMETER SET	18
7.1	CONNECTION PRESSURE TRANSMITTER	20
7.2	CONNECTION CURRENT SOURCE	21
7.3.1	CONNECTION TEMPERATURE SENSOR	22
7.3.2	TEMPERATURE/IMPEDANCE TABLE	22
7.4	CONNECTION STANDARD SIGNAL 0-10V	23
8.1	ANALOGUE OUTPUTS	24
10.1	SELECTION OF REFRIGERANT	29
10.1.1	ERROR DISPLAY ABBREVIATIONS	30
10.1.2	CONTROLS	31
10.3.6.1	LCMM FAN CONTROL	48
10.3.6.4.2	LCMM HYSTERESIS	49
10.3.6.4.5	LCMM ADJUSTMENT	51
12.1	DIMENSIONS HOUSING GMM EC/01 /04 /08	59
12.2	DIMENSIONS HOUSING GMM EC/16	60
12.3	DIMENSIONS HOUSING GMM EC/01 /04 /08 UL	61
12.4	DIMENSIONS HOUSING GMM EC/16 UL	62

Index

3

3 wire sensors	20
----------------	----

A

Actual value 0-10V	55
Actual value pressure	55
Actual value temperature	55
Actual values	32
Air flow	32
Alerts	36
Auto external analogue	44
Auto external bus	44
Auto internal	44

B

Bypass	45
--------	----

C

Cable entries	11
Centralised fault	14
Classification	7
Connection cables	12
Control inputs	16
Control parameters	41
Control value	32
Control value Slave	55
Current inputs	55

D

Delivery setting	57
Diagrams list	64
Dimensions GMM EC/16	60
Dimensions GMM 1-8	59
Dimensions GMM EC/01 /04 /08 UL	61
Dimensions GMM EC/16 UL	62
Display	30

E

Enabling	16
Errors -general Notes-	58

F

Factory settings	57
failsafe	56
Fan connection	13
Fan performance	32
Fan power	32
Fan speed	32
Fan speed max.	33

Fault fuses	58
Fault Sensor connection	58
Features	46

G

GSW4003	55
GSW4003	20
GTF210	22

H

Hardware and software versions	33
Hardware error	58
Heat exchanger	33, 42

I

I/O configuration	53
Info menu	30
Input 0-10V	55
Input actual values	32
Input D2	47
Input D3	46
Inputs digital	56
Inputs analogue	54
Installation	11

L

Language	37
LCMM fan cycling assignment	50

M

Mains connection	12
mains in	21
Manual mode	39
MAX selection	55
Moisture protection	11

N

Night limiter	35, 47
Night limiter	17
Night limiter turn-off time	35
Night limiter turn-on time	35
Number of setpoints	46

O

Offset setpoint	47
Offset setpoint	34
Operating menu	31
Operating mode	33
Operation	30
Operation mode	44

Output 11/12/14	14
Output 21/22/24	14
Output 31/32/34	14
Output 41/42/44	14
Outputs analogue	56
Outputs digital	56
Overall power	32

P

Password	40
Pressure transmitter	20
Properties of the controller	63

R

Refrigerant	43
Refrigerant	33
Regulation	33

S

Sel. unit IP/SI	57
Sensors (3-wire)	20
Service	40
Service Number	8
Setpoint 1	55

Setpoint 1	34
Setpoint 2	55
Setpoints	34
Signalling outputs	14
Slave external analogue	44
Slave external bus	44
Speed limiter	17
Standard signal 0-10V	23
Start-up menu	25
Switchover to D3	18

T

Table Troubleshooting	74
Technical Data	59, 63
Temperature sensor	22
Temperature sensor input	55
Threshold	14, 34
Time	38

U

UL	1, 2, 7, 9, 12
----	----------------

V

Ventilation	11
-------------	----



Repair order / Fault report

Equipment type: _____ Serial no. _____
Customer: _____
Administrator: _____
Tel. (direct dial) _____ Date: _____
Güntner order number: _____ of: _____

Reason for return:

- ☐ Repair as per fault description
☐ Check functions and controller behaviour
☐ We would like a cost estimate
☐ Repair at cost

Time of the fault:

- ☐ During commissioning at the customer's premises
☐ During operation
☐ On activation
☐ On deactivation

Nature of the fault:

- ☐ Fault occurs intermittently
☐ Fault occurs all the time
☐ Fault only occurs in particular situations

Description of the fault:

Please complete and fax back to +49 (0)8141/242-422 Güntner AG & Co. KG



Notes

[illegible]

14. External control value scaling table

The dependencies of the external control value specs for the current value regulations are explained in this table. A 0 ..10V external voltage can, for example, specify a temperature control value. 0V is then equal to a temperature of 0°C and a voltage of 10V is equal to a control value temperature of 100°C.

Current value	Control value internal, depending on current value	Control value external current 4 .. 20mA	Control value external voltage 0 .. 10V
Pressure 0 .. 25 bar	Pressure 0 .. 50 bar	4mA = 0 bar 20mA = 50 bar	0V = 0 bar 10V = 50 bar
Temperature 0 .. 100°C	Temperature 0 .. 100°C	4mA = 0°C 20mA = 100°C	0V = 0°C 10V = 100°C
Voltage 0 .. 10V	Voltage 0 .. 10V	4mA = 0V 20mA = 10V	0V = 0V 10V = 10V

15. Table of error messages and warnings on the GMM display

The table shows which signalling relay (**PRIO 1** or **PRIO 2**) is tripped with which message on the display.

Messages / warnings on the display	PRIO 1	PRIO 2	Explanation
Display dark, GMM off	X		GMM has no supply voltage
Hardware error	X		No cooling on the heat exchanger
No sensor selected			No sensor activated in the I/O configuration
Sensor fault x			The sensor with no. x has a fault.
not enabled			D1 not switched (Controller is not enabled)
Controller 2			Control system 2 activated
Night setback			Night setback activated
F x cable break		X	Communications fault on fan x
F x Temp M		X	Temperature fault on fan x, motor
F x Temp E		X	Temperature fault on fan x, output stage
F x Temp I		X	Temperature fault on fan x, electronics
F x wrong VT		X	Fan x wrong VT number
F x power fail		X	Fan x has not power x
F x blocked		X	Fan x blocked
Fx not OK		X	Internal communications fault in motor electronics on fan x. Warning: This error is also displayed if the power supply of the fan fails. For 1-phase motors in case of power failure. For 3-phase motors in case of failure of 2 or 3 phases.
F x Hallsensor		X	Hall sensor on fan x defective
F x fault B		X	Fan x braking operation (external operation)
F x fault H		X	Fan x intermediate circuit, overvoltage
F x fault L		X	Fan x intermediate circuit, undervoltage

PRIO 1 = Relay contacts 11/12

PRIO 2 = Relay contacts 21/22

In operation = Relay contacts 31/34 if control signal > 0%

Threshold = Relay contacts 41/42 the contacts close when the control signal has reached the set threshold. Setting a threshold see **10.2.3.3 Threshold.**

16. Table of Fan IDs and VT numbers

Heat Exchanger	EC Fans			
	Fan type	Fan-ID	Working point (maximum speed) $n_{\text{min}}/11$	Voltage [V]
Gxx045xxxNW	VT03007U	1185	1250	230
GVX.0xxxNW	VT03007U	1185	1250	230
Gxx045xxxLW	VT03006U	1186	1000	230
GVX.0xxxLW	VT03006U	1272	900	230
Gxx045xxxSW	VT03006U	1187	770	230
GVX.0xxxLW	VT03006U	1273	750	230
Gxx052xxxND	VT03013U	1188	1500	400
Gxx052xxxNJ	VT03013U	1188	1500	400
Gxx05xxxxND	VT03013U	1396	1100	400
GVX.0xxxND	VT03012U	1195	1455	400
Gxx052xxxNS	VT03011U	1189	1140	230
GVX.0xxxNS	VT03010U	1196	1070	230
Gxx052xxxLD	VT03011U	1190	1000	230
Gxx052xxxLJ	VT03011U	1190	1000	230
GVX.0xxxLD	VT03010U	1197	930	230
Gxx052xxxLS	VT03009U	1191	785	230
Gxx052xxxSD	VT03009U	1240	750	230
GVX.0xxxSD	VT03008U	1198	710	230
Gxx052xxxED	VT03009U	1193	660	230
GVX.0xxxED	VT03008U	1199	640	230
GVX.0xxxLS	VT03008U	1200	620	230
Gxx052xxxSS	VT03009U	1192	610	230
GVX.0xxxSS	VT03008U	1201	570	230
Gxx052xxxES	VT03009U	1194	385	230
GVX.0xxxES	VT03008U	1271	375	230
S-GHN	VT03070U	1738	1240	230
Gxx067xxxND	VT03017U	1202	1300	400
Gxx067xxxNJ	VT03017U	1202	1300	400
Gxx067xxxNS	VT03016U	1203	1050	400
Gxx067xxxLD	VT03016U	1204	890	400
Gxx067xxxLJ	VT03016U	1204	890	400
Gxx067xxxLS	VT03015U	1205	745	230
Gxx067xxxSD	VT03015U	1206	715	230
Gxx067xxxED	VT03014U	1208	615	230
Gxx067xxxSS	VT03014U	1207	550	230
Gxx067xxxES	VT03014U	1209	400	230
Gxx06xxxxLD	VT03071U	1744	890	230

Heat Exchanger
GVX071.0xxxND
GVX071.0xxxMD
GVX071.0xxxMS
GVX071.0xxxNS
GVX071.0xxxLD
GVX071.0xxxLS
GVX071.0xxxSD
GVX071.0xxxSS
GVX071.0xxxED
GVX071.0xxxES

EC Fans			
Fan type	Fan-ID	Working point (maximum speed) $n_{min,1}$	Voltage [V]
VT03021U	1279	1220	400
VT03021U	1280	1150	400
VT03021U	1281	960	400
VT03021U	1278	900	400
VT03020U	1274	845	400
VT03020U	1275	720	400
VT03020U	1276	620	400
VT03035U	1282	500	230
VT03035U	1283	415	230
VT03035U	1284	340	230

Gxx080xxxND
Gxx080xxxNL
Gxx080xxxNJ
Gxx080xxxMD
Gxx080xxxNS
Gxx080xxxML
Gxx080xxxLD
Gxx080xxxMJ
Gxx080xxxLL
Mxx080xxxLL
Gxx080xxxSL
Mxx080xxxSL
Gxx080xxxMS
Gxx080xxxLL
Gxx080xxxLS
Gxx080xxxLJ
Gxx080xxxSD
Gxx080xxxSL
Gxx080xxxED
Gxx080xxxEL
Gxx080xxxSJ
Gxx080xxxSS
Gxx080xxxEJ
Gxx080xxxES
Gxx080.1...CND
Gxx080.1...CNL
Gxx080.1...CNS
Gxx080.1...CML
Gxx080.1...CMD
Gxx080.1...CNJ
Gxx080.1...CLD
Gxx080.1...CMJ
Gxx080.1...CMS
Gxx080.1...CLL
Gxx080.1...CLS
Gxx080.1...CSD
Gxx080.1...CSL
Gxx080.1...CLJ

VT03025U	1210	975	400
VT03025U	1210	975	400
VT03025U	1241	900	400
VT03025U	1212	865	400
VT03025U	1211	770	400
VT03025U	1211	770	400
VT03024U	1219	735	400
VT03024U	1242	700	400
VT03024U	1741	600	400
VT03024U	1741	600	400
VT03024U	1742	500	400
VT03024U	1742	500	400
VT03023U	1213	600	230
VT03023U	1213	600	230
VT03023U	1214	575	230
VT03023U	1243	545	230
VT03023U	1237	470	230
VT03023U	1237	470	230
VT03022U	1217	435	230
VT03022U	1217	435	230
VT03022U	1217	435	230
VT03022U	1216	380	230
VT03022U	1216	380	230
VT03022U	1218	300	230
VT03059U	1656	1000	400
VT03059U	1656	1000	400
VT03059U	1657	770	400
VT03059U	1657	770	400
VT03059U	1658	865	400
VT03059U	1659	900	400
VT03060U	1660	735	400
VT03060U	1661	710	400
VT03061U	1662	600	230
VT03061U	1662	600	230
VT03061U	1663	575	230
VT03061U	1664	470	230
VT03061U	1664	470	230
VT03061U	1665	545	230

Heat Exchanger
Gxx080.1...CSS
Gxx080.1...CEJ
Gxx080.1...CED
Gxx080.1...CEL
Gxx080.1...CSJ
Gxx080.1...CES

EC Fans			
Fan type	Fan-ID	Working point (maximum speed) $n_{fmin-11}$	Voltage [V]
VT03062U	1682	380	230
VT03062U	1682	380	230
VT03062U	1683	435	230
VT03062U	1683	435	230
VT03062U	1683	435	230
VT03062U	1684	300	230

Gxx090xxxMD
Gxx090xxxML
Gxx090xxxMJ
Gxx090xxxNS
Gxx090xxxLL
Gxx090xxxLJ
Gxx090xxxMS
Gxx090xxxSL
Gxx090xxxSJ
Gxx090xxxSD
Gxx090xxxLD
Gxx090xxxED
Gxx090xxxEL
Gxx090xxxSS
Gxx090xxxEJ
Gxx090xxxLS
Gxx090xxxES
Gxx090.1...CMD
Gxx090.1...CNS
Gxx090.1...CMS
Gxx090.1...CLL
Gxx090.1...CLJ
Gxx090.1...CLD
Gxx090.1...CSD
Gxx090.1...CED
Gxx090.1...CEL
Gxx090.1...CSL
Gxx090.1...CSJ
Gxx090.1...CLS
Gxx090.1...CSS
Gxx090.1...CEJ
Gxx090.1...CES
Gxx100xxxND
Gxx100xxxNS
Gxx100xxxLD
Gxx100xxxSD
Gxx100xxxED
Gxx100xxxLS
Gxx100xxxSS
Gxx100xxxES

VT03030U	1220	960	400
VT03030U	1220	960	400
VT03030U	1220	960	400
VT03029U	1221	910	400
VT03028U	1244	825	400
VT03028U	1244	825	400
VT03028U	1222	690	400
VT03027U	1245	650	400
VT03027U	1245	650	400
VT03027U	1224	610	400
VT03027U	1223	570	400
VT03027U	1225	530	400
VT03027U	1225	530	400
VT03026U	1227	485	230
VT03026U	1227	485	230
VT03026U	1226	355	230
VT03026U	1228	335	230
VT03063U	1668	960	400
VT03064U	1671	910	400
VT03065U	1672	690	400
VT03065U	1673	825	400
VT03065U	1673	825	400
VT03066U	1674	570	400
VT03066U	1675	610	400
VT03066U	1676	530	400
VT03066U	1676	530	400
VT03066U	1677	650	400
VT03066U	1677	650	400
VT03067U	1678	355	230
VT03067U	1679	485	230
VT03067U	1679	485	230
VT03067U	1680	335	230
VT03032U	1233	935	400
VT03031U	1229	745	400
VT03031U	1229	745	400
VT03031U	1231	640	400
VT03031U	1238	575	400
VT03031U	1230	525	400
VT03031U	1232	470	400
VT03031U	1239	380	400

17. Troubleshooting table

Error	Possible cause, suggested solution
Fans are not turning	- If NOTHING happens when the controller is switched on and nothing appears in the Info menu either as a setpoint or a actual value, check the operation mode and the I/O configuration. The operation mode appears on the far right of the 2nd line (A = automatic, S = slave mode, H = manual mode). The wrong input function has been chosen for the selected operation mode in the I/O configuration (see page 53). - If the setpoint and the actual value appear in the Info menu but the setpoint does not match the defined setpoint, check the mode for any setpoint that may have been set externally (see page 44). - Check the power supply and the cable to the fan for faults (cable break etc.). - Has the sensor failed? Check: 2-wire pressure sensor: Should deliver 4-20 mA (check with ampmeter). You can also check the voltage between "GND" and the signal connection, it should be between 0.4 and 2 V. Temperature sensor: Measure the impedance, it should be between 1200 and 2700 Ohm. Lower values indicate a short circuit or similar fault (e.g. water in the terminal box), higher values indicate a loose connection or cable break. Standard signal: May be between 0 and 10V. If it is permanently at 0V, a defect is probable.
Fan does not reach its maximum speed or runs too slowly in normal operation	- Is the limiter active? The maximum fan speed is limited to the speed set here. Check the setting! - The control system may be incorrectly set up. - The fan speed increases when you increase the setpoint. If this does not help, you can adjust the Kp factor carefully: if the Kp factor is increased, the fan will reach its maximum speed more quickly. NOTE: too great an increase in the Kp factor can lead to "oscillation"! If this happens, reduce the Kp factor again. - Is the sensor delivering a correct signal? If it is too low, the fan will not reach the requisite speed. Check: Temperature sensor: Has the sensor been installed correctly? An incorrect value will be recorded near heat sources or e.g. in direct sunlight. Check the sensor and wiring! (Cable break? Has a wire come loose from the connection terminals?) Standard signal 0-10V: Measure the signal on the terminals using a multimeter. It should be between 0 and 10V. Is the polarity correct? Pressure transmitter: The 2-wire sensor delivers 4-20 mA; check this value (ammeter). If the value is not within this range or remains constant even when the pressure changes, the pressure transmitter is defective. Alternatively you can measure the voltage at the signal input to minus (GND): this should be between 0.4 and 2.0 V.